


# Installation, Operation, and Maintenance

## Single Packaged Heat Pump, Priority, Two Stage, Convertible, 2 to 5 Ton, R-454B

5WCZ5024A1000A  
5WCZ5030A1000A  
5WCZ5036A1000A  
5WCZ5042A1000A  
5WCZ5048A1000A  
5WCZ5060A1000A  
5WCZ5036A3000A  
5WCZ5048A3000A  
5WCZ5060A3000A  
5WCZ5036A4000A  
5WCZ5048A4000A  
5WCZ5060A4000A

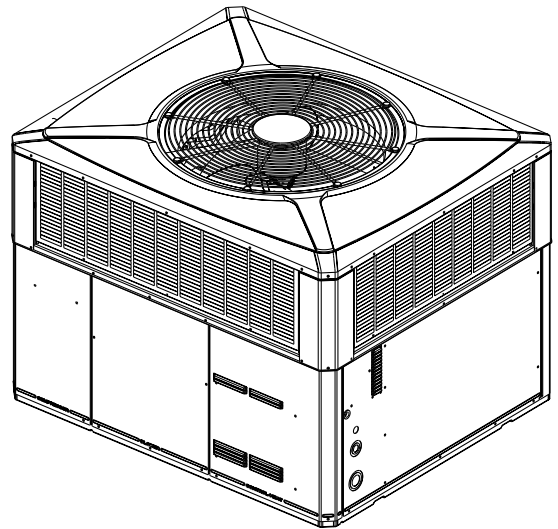

**Note:** "Graphics in this document are for representation only. Actual model may differ in appearance."

**Note:** "Unit specific Service Facts available online."

### **⚠ SAFETY WARNING**

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

# SAFETY SECTION

**Important:** This document contains a wiring diagram, a parts list, and service information. This is customer property and is to remain with this unit. Please return to service information pack upon completion of work.

## ⚠ WARNING

### Hazardous Voltage!

Failure to disconnect power before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. Verify that no power is present with a voltmeter.

## ⚠ WARNING

### Safety and Electrical Hazard!

Failure to follow instructions below could result in death or serious injury or property damage.

All servicing **MUST** be performed by qualified personnel only based on the operating instructions provided.

## ⚠ WARNING

### Grounding Required!

Failure to follow instructions below could result in death or serious injury, or property damage.

- Reconnect all grounding devices.
- All parts of this product that are capable of conducting electrical current are grounded.
- If grounding wires, screws, straps, clips, nuts, or washers used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened.

## ⚠ CAUTION

### Sharp Edges!

Failure to follow instructions below could result in minor to moderate injury.

The service procedure described in this document involves working around sharp edges. To avoid being cut, technicians **MUST** put on all necessary Personal Protective Equipment (PPE), including gloves and arm guards.

## ⚠ CAUTION

### Unit Contains R-454B Refrigerant!

Failure to use proper service tools may result in equipment damage or personal injury.

Use only R-454B refrigerant and approved compressor oil.

## ⚠ WARNING

### Leak Detection System Installed!

Failure to follow instructions below could result in death or serious injury or equipment damage.

The unit is equipped with electrically powered safety measures and must be powered at all times after installation, except during servicing, to detect any leak.

## ⚠ WARNING

### Safety Hazard!

Failure to follow instructions below could result in death or serious injury or property damage.

Children should be supervised to ensure that they do not play with the appliance.

## ⚠ WARNING

### Safety Hazard!

Failure to follow instructions below could result in death or serious injury or property damage.

This appliance is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

## ⚠ WARNING

### Safety Hazard!

Failure to operate the unit without the access panels properly installed could result in death or serious injury.

Do not operate the unit without the evaporator fan access panel or evaporator coil access panel in place. Reinstall the access panels after performing maintenance procedures on the fan.

## ⚠ WARNING

### Risk of Fire — Flammable Refrigerant!

Failure to follow instructions below could result in death or serious injury, and equipment damage.

- To be repaired only by trained service personnel.
- Do not puncture refrigerant tubing.
- Dispose of properly in accordance with federal or local regulations.

**⚠ WARNING**

**Cancer and Reproductive Harm!**

This product can expose you to chemicals including lead and bisphenol A (BPA), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**Important:** Wear appropriate gloves, arm sleeve protectors and eye protection when servicing or maintaining this equipment.

**Important:** Air filters and media wheels or plates shall meet the test requirements in UL 900.

# Table of Contents

Information on Servicing .....	5	Ductwork Installation .....	22
Prior to Beginning Work.....	5	Attaching Downflow Ductwork to	
Repairs to Electrical Components .....	5	Roof Curb .....	22
Detection of Flammable Refrigerants .....	5	Attaching Downflow Ductwork to	
Removal and Evacuation .....	6	Roof Frame.....	22
Charging Procedures .....	6	Attaching Horizontal Ductwork to	
Recovery.....	6	Unit.....	22
Decommissioning .....	7	Condensate Drain Piping .....	22
Introduction, Unit Inspection and		Air Filter Installation .....	22
Specification .....	8	Electrical Wiring .....	23
Introduction.....	8	Unit Start-Up .....	25
Inspect Shipment.....	8	Pre-Start Quick Checklist .....	25
Product Specification .....	9	Starting the Unit in Cooling Mode.....	25
Charging in Cooling above 55°F OD		Starting the Unit in Heating Mode.....	25
Ambient .....	12	Sequence of Operation.....	26
Determine Unit Clearances .....	13	Final Installation Checklist .....	28
Review Location and Recommendation		Verification of Mitigation Actions .....	28
Information.....	15	Maintenance .....	29
Refrigerant Leak Detection System.....	16	Owner Maintenance.....	29
Unit Installation .....	17	Service Maintenance .....	29
Ground Level Installation.....	17	Fault Detection.....	29
Rooftop Installation — Curb		Pressure Curves .....	32
Mounting .....	17	Indoor Fan Performance.....	38
Lifting and Rigging.....	18	Refrigerant Circuit .....	40
Rooftop Installation — Frame		Troubleshooting Chart .....	41
Mounting .....	19	Important Product Information .....	44
Rooftop Installation — No Curb/ Frame .....	19		

# Information on Servicing

All replacement parts shall be in accordance with the manufacturer's specifications.

## Prior to Beginning Work

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following shall be completed prior to conducting work on the system:

- Work shall be undertaken under a controlled procedure to minimize the risk of a flammable gas or vapor being present while the work is being performed.
- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.
- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e., non-sparking, adequately sealed or intrinsically safe.
- If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.
- No person carrying out work in relation to a refrigerating system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.
- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
- The following checks shall be applied to installations using flammable refrigerants:
  - Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;

- Refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

## Repairs to Electrical Components

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment, so all parties are advised.

Initial safety checks shall include:

- That capacitors are discharged; this shall be done in a safe manner to avoid possibility of sparking;
- That no live electrical components and wiring are exposed while charging, recovering or purging the system;
- That there is continuity of earth bonding.

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

## Detection of Flammable Refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection method is deemed acceptable for all refrigerant systems:

- Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall

be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

**Important:** *The following leak detection methods are deemed acceptable for all refrigerant systems:*

*Electronic leak detectors calibrated for R-454B (with a sensitivity of 5 grams/year)*

- Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

Example of leak detection fluids are:

- Bubble method,
- Fluorescent method agents

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak.

## Removal and Evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration. The following procedure shall be adhered to:

- Safely remove refrigerant following local and national regulations;
- Evacuate;
- Purge the circuit with inert gas;
- Evacuate;
- Continuously flush or purge with inert gas when using flame to open circuit;
- And open the circuit.

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants.

This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the

vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

## Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigerating system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

**Important:** *The unit should not be tested higher than 450 psig for servicing or component replacement.*

See installation instructions below for further details.

## Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e., special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.

## Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task is commenced.

1. Become familiar with the equipment and its operation.
2. Isolate system electrically.
3. Before attempting the procedure, ensure that:
  - a. Mechanical handling equipment is available, if

required, for handling refrigerant cylinders;

- b. All personal protective equipment is available and being used correctly;
  - c. The recovery process is supervised at all times by a competent person;
  - d. Recovery equipment and cylinders conform to the appropriate standards.
4. Pump down refrigerant system, if possible.
  5. If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
  6. Make sure that cylinder is situated on the scales before recovery takes place.
  7. Start the recovery machine and operate in accordance with instructions.
  8. Do not overfill cylinders (no more than 80 % volume liquid charge).
  9. Do not exceed the maximum working pressure of the cylinder, even temporarily.
  10. When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
  11. Recovered refrigerant shall not be charged into another refrigerating system unless it has been cleaned and checked.

Equipment shall be labelled stating that it has been decommissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerant, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

# Introduction, Unit Inspection and Specification

## Introduction

Read this manual carefully before attempting to install, operate, or perform maintenance on this unit. Installation and maintenance should be performed by qualified service technicians only. This unit is listed by Underwriters Laboratory.

Packaged units are designed for outdoor mounting with a vertical condenser discharge. They can be located either at ground level or on a roof in accordance with local codes. Each unit contains an operating charge of refrigerant as shipped.

Extreme mounting kits are available for slab (BAYEXMK003), utility curb (BAYEXMK002) and perimeter curb (BAYEXMK001) mountings.

## Inspect Shipment

1. Check for damage after the unit is unloaded. Report promptly to the carrier any damage found to the unit. Do not drop the unit.

**Important:** To prevent damage to the sides and top of the unit when hoisting, use "spreader bars" see, "Rooftop Installation — No Curb/Frame," p. 19.

2. Check the unit's nameplate to determine if the unit is correct for the intended application. The power supply must be adequate for both the unit and all accessories.
3. Check to be sure the refrigerant charge has been retained during shipment. Remove the Compressor access panel to access the 1/4" flare pressure taps.
4. If this unit is being installed on a curb, verify that the correct curb is provided with the unit.
  - 5WCZ5024-036 use model BAYCURB050,
  - 5WCZ5042-060 use model BAYCURB051
5. If the unit is being hoisted, accessory kit BAYLIFT002 is recommended. It includes a kit of four (4) lifting lugs and instructions.

### Notes:

- If practical, install any internal accessories to the unit at the shop.
- The packaged units have been evaluated in accordance with the Code of Federal Regulations, Chapter XX, Part 3280 or the equivalent. "SUITABLE FOR MOBILE HOME USE."



## Product Specification

Model	5WCZ5024*1	5WCZ5030*1	5WCZ5036*1	5WCZ5042*1	5WCZ5048*1	5WCZ5060*1
RATED Volts/PH/Hz	208-230/1/60	208-230*1/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60
<b>PERFORMANCE COOLING<sup>(a)</sup></b>						
BTUH (High)	23400	29600	35200	42000	46000	58000
Indoor Airflow (CFM) (High)	810	880	1100	1410	1600	1780
Power Input (KW)	1.94	2.64	3.12	3.55	4.09	5.06
BTUH (Low)	19200	24000	27800	34400	36600	46000
Indoor Airflow (CFM) (Low)	630	710	830	1090	1280	1290
Power Input (KW)	1.08	1.52	1.77	2.01	2.28	2.83
EER2 / SEER2 BTU/Watt-Hr <sup>(b)</sup>	11.5/15.2	11.2/15.2	11.5/15.2	11.5/15.2	11.5/15.2	11.5/15.2
Sound Power Rating [dB (A)] <sup>(c)</sup>	66.8	67.3	70	72	72	80
<b>PERFORMANCE HEATING</b>						
(High Temp.) BTUH/COP (High)	22200/3.57	28800/3.47	33000/3.38	39000/3.76	42000/3.59	56000/3.26
Power Input (KW)	1.82	2.43	2.86	3.04	3.43	5.03
(Low Temp.) BTUH/COP (High)	13800/2.48	18600/2.51	21800/2.48	25600/2.75	28000/2.6	37800/2.47
Power Input (KW)	1.63	2.17	2.58	2.73	3.16	4.49
(High Temp.) BTUH/COP (Low)	16000/3.52	20800/3.46	23600/3.32	28600/3.84	31400/3.85	40000/3.26
Power Input (KW)	1.33	1.76	2.08	2.18	2.39	3.59
(Low Temp.) BTUH/COP (Low)	8600/2	12200/2.13	14000/2.09	16600/2.34	17200/2.2	24000/2.07
Power Input (KW)	1.26	1.68	1.96	2.08	2.29	3.4
HSPF2 (BTUH/Watt-Hr)	7.2	7.2	7.7	7.2	8.1	7.2
<b>POWER CONN. — V/Ph/Hz</b>	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60
Min. Brch. Cir. Ampacity <sup>(d)</sup>	<b>LOCATED ON UNIT NAMEPLATE</b>					
Fuse Size — Max. (amps)	<b>LOCATED ON UNIT NAMEPLATE</b>					
Fuse Size — Recmd. (amps)	<b>LOCATED ON UNIT NAMEPLATE</b>					
<b>COMPRESSOR</b>	2 STAGE SCROLL	2 STAGE SCROLL	2 STAGE SCROLL	2 STAGE SCROLL	2 STAGE SCROLL	2 STAGE SCROLL
VOLTS/PH/Hz	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/3/60
R.L. Amps — L.R. Amps	<b>LOCATED ON UNIT NAMEPLATE</b>					
<b>OUTDOOR COIL — TYPE</b>	SPINE FIN	SPINE FIN	SPINE FIN	SPINE FIN	SPINE FIN	SPINE FIN
Rows/F.P.I	2 / 24	2 / 24	2 / 24	2 / 24	2 / 24	2 / 24
Face Area (sq. ft.)	15.49	15.49	15.49	23.57	23.57	23.57
Tube Size (in.)	3/8	3/8	3/8	3/8	3/8	3/8
Refrigerant Control	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE
<b>INDOOR COIL — TYPE</b>	PLATE FIN	PLATE FIN	PLATE FIN	PLATE FIN	PLATE FIN	PLATE FIN
Rows/F.P.I	4/15	4/15	4 / 15	4 / 15	4 / 15	4 / 15
Face Area (sq. ft.)	3.5	3.5	3.54	5	5	5
Tube Size (in.)	3/8	3/8	3/8	3/8	3/8	3/8
Refrigeration Control	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE
Drain Conn. Size (in.)	3/4 FEMALE NPT	3/4 FEMALE NPT	3/4 FEMALE NPT	3/4 FEMALE NPT	3/4 FEMALE NPT	3/4 FEMALE NPT
<b>OUTDOOR FAN — TYPE</b>	PROPELLER	PROPELLER	PROPELLER	PROPELLER	PROPELLER	PROPELLER
DIA. (IN.)	23.4	23.4	23.4	28.0	28.0	28.3
DRIVE/NO. SPEEDS	DIRECT/ 1	DIRECT/ 1	DIRECT/ 1	DIRECT/ 1	DIRECT/ 1	DIRECT/ 1

## Introduction, Unit Inspection and Specification

Model	5WCZ5024*1	5WCZ5030*1	5WCZ5036*1	5WCZ5042*1	5WCZ5048*1	5WCZ5060*1
CFM @ 0.0 in. w.g. <sup>(e)</sup>	2550	2550	3020	4200	4200	5500
Motor— HP/R.P.M	1/12 /810	1/12 /810	1/6 / 830	1/6 / 830	1/6 / 830	1/3 / 825
Volts/Ph/Hz	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60
F.L. Amps/L.R Amps	<b>LOCATED ON UNIT NAMEPLATE</b>					
<b>INDOOR FAN — TYPE</b>	CENTRIFUGAL	CENTRIFUGAL	CENTRIFUGAL	CENTRIFUGAL	CENTRIFUGAL	CENTRIFUGAL
Dia. x Width (in.)	10 x 10	10 x 10	10 x 10	11 x 10	10 x 10	11 x 10
Drive/No. Speeds	DIRECT / VARIABLE	DIRECT / VARIABLE	DIRECT / VARIABLE	DIRECT / VARIABLE	DIRECT / VARIABLE	DIRECT / VARIABLE
CFM @ 0.0 in. w.g. <sup>(f)</sup>	SEE FAN PERFORMANCE TABLE					
Motor—HP/R.P.M.	1/2/VARIABLE	1/2/VARIABLE	1/2/VARIABLE	3/4 / VARIABLE	3/4 / VARIABLE	1/VARIABLE
Volts/Ph/Hz	208–240/1/60	208–240/1/60	208–230/1/60	208–230/1/60	208–230/1/60	208–230/1/60
F.L. Amps/L.R Amps	4.3 / 4.3	4.3 / 4.3	4.3 / 4.3	6.8 / 6.8	6.8 / 6.8	6.9 / 6.9
<b>FILTER/ FURNISHED</b>	NO	NO	NO	NO	NO	NO
Type Recommended	THROWAWAY	THROWAWAY	THROWAWAY	THROWAWAY	THROWAWAY	THROWAWAY
Recmd. Face Area (sq. ft) <sup>(g)</sup>	4.0	4.0	4.0	5.3	5.3	5.3
<b>REFRIGERANT</b>	R-454B	R-454B	R-454B	R-454B	R-454B	R-454B
Charge (lbs.)	<b>LOCATED ON UNIT NAMEPLATE</b>					
Subcooling	9° F	8° F	12° F	11° F	11° F	10° F

(a) Rated in accordance with AHRI 210/240-2023.

(b) Rated in accordance with D.O.E. test procedure.

(c) Sound Power values are not adjusted for AHRI 270–95 tonal corrections.

(d) Calculated in accordance with currently prevailing Nat'l Electrical Code.

(e) Standard Air — Dry Coil — Outdoor.

(f) Standard Air — Dry Coil — Indoor

(g) Filters must be installed in return air stream. Square footages listed are based on 300 f.p.m. face velocity. If permanent filters are used size per manufacturer's recommendation with a clean resistance of 0.05" W.C.

Model	5WCZ5036*3	5WCZ5048*3	5WCZ5060*3	5WCZ5036*4	5WCZ5048*4	5WCZ5060*4
RATED Volts/PH/Hz	208–230/3/60	208–230/3/60	208–230/3/60	460 / 3 / 60	460 / 3 / 60	460 / 3 / 60
<b>PERFORMANCE COOLING<sup>(a)</sup></b>						
BTUH (High)	35000	46000	58000	35000	46000	58000
Indoor Airflow (CFM) (High)	1100	1600	1780	1100	1600	1780
Power Input (KW)	3.12	4.09	5.06	3.12	4.09	5.06
BTUH (Low)	27800	36600	46000	27800	36600	46000
Indoor Airflow (CFM) (Low)	830	1280	1290	830	1280	1290
Power Input (KW)	1.77	2.28	2.83	1.77	2.28	2.83
EER2 / SEER2 BTU/Watt-Hr <sup>(b)</sup>	11.5/15.2	11.5/15.2	11.5/15.2	11.5/15.2	11.5/15.2	11.5/15.2
Sound Power Rating [dB (A)] <sup>(c)</sup>	70	72	80	72	74	77
<b>PERFORMANCE HEATING</b>						
(High Temp.) BTUH/COP (High)	33000/3.38	42000/3.59	56000/3.26	33000/3.38	42000/3.59	56000/3.26
Power Input (KW)	2.86	3.43	5.03	2.86	3.43	5.03
(Low Temp.) BTUH/COP (High)	21800/2.48	28000/2.6	37800/2.47	21800/2.48	28000/2.6	37800/2.47
Power Input (KW)	2.58	3.16	4.49	2.58	3.16	4.49
(High Temp.) BTUH/COP (Low)	23600/3.32	31400/3.85	40000/3.26	23600/3.32	31400/3.85	40000/3.26
Power Input (KW)	2.08	2.39	3.59	2.08	2.39	3.59
(Low Temp.) BTUH/COP (Low)	14000/2.09	17200/2.2	24000/2.07	14000/2.09	17200/2.2	24000/2.07
Power Input (KW)	1.96	2.29	3.4	1.96	2.29	3.4
HSPF2 (BTUH/Watt-Hr)	7.7	8.1	7.2	7.7	8.1	7.2

## Introduction, Unit Inspection and Specification

Model	5WCZ5036*3	5WCZ5048*3	5WCZ5060*3	5WCZ5036*4	5WCZ5048*4	5WCZ5060*4
<b>POWER CONN. — V/Ph/Hz</b>	208-230/3/60	208-230/3/60	208-230/3/60	460/3/60	460/3/60	460/3/60
Min. Brch. Cir. Ampacity <sup>(d)</sup>	<b>LOCATED ON UNIT NAMEPLATE</b>					
Fuse Size — Max. (amps)	<b>LOCATED ON UNIT NAMEPLATE</b>					
Fuse Size — Recmd. (amps)	<b>LOCATED ON UNIT NAMEPLATE</b>					
<b>COMPRESSOR</b>	2 STAGE SCROLL	2 STAGE SCROLL	2 STAGE SCROLL	2 STAGE SCROLL	2 STAGE SCROLL	2 STAGE SCROLL
VOLTS/PH/HZ	208-230/3/60	208-230/3/60	208-230/3/60	460/3/60	460/3/60	460/3/60
R.L. Amps — L.R. Amps	<b>LOCATED ON UNIT NAMEPLATE</b>					
<b>OUTDOOR COIL — TYPE</b>	SPINE FIN	SPINE FIN	SPINE FIN	SPINE FIN	SPINE FIN	SPINE FIN
Rows/F.P.I	2 / 24	2 / 24	2 / 24	2 / 24	2 / 24	2 / 24
Face Area (sq. ft.)	15.49	23.57	23.57	15.49	23.57	23.57
Tube Size (in.)	3/8	3/8	3/8	3/8	3/8	3/8
Refrigerant Control	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE
<b>INDOOR COIL — TYPE</b>	PLATE FIN	PLATE FIN	PLATE FIN	PLATE FIN	PLATE FIN	PLATE FIN
Rows/F.P.I	4 / 15	4 / 15	4 / 15	4 / 15	4 / 15	4 / 15
Face Area (sq. ft.)	3.54	5	5	3.54	5	5
Tube Size (in.)	3/8	3/8	3/8	3/8	3/8	3/8
Refrigeration Control	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE	EXPANSION VALVE
Drain Conn. Size (in.)	3/4 FEMALE NPT	3/4 FEMALE NPT	3/4 FEMALE NPT	3/4 FEMALE NPT	3/4 FEMALE NPT	3/4 FEMALE NPT
<b>OUTDOOR FAN — TYPE</b>	PROPELLER	PROPELLER	PROPELLER	PROPELLER	PROPELLER	PROPELLER
DIA. (IN.)	23.4	28.0	28.3	23.36	28	28.3
DRIVE/NO. SPEEDS	DIRECT/ 1	DIRECT/ 1	DIRECT/ 1	DIRECT/ 1	DIRECT/ 1	DIRECT/ 1
CFM @ 0.0 in. w.g. <sup>(e)</sup>	3020	4200	5500	3020	4200	5500
Motor— HP/R.P.M	1/6 / 830	1/6 / 830	1/3 / 825	1/3 / 825	1/3 / 825	1/3 / 825
Volts/Ph/Hz	208-230/1/60	208-230/1/60	208-230/1/60	460/3/60	460/3/60	460/3/60
F.L. Amps/L.R Amps	<b>LOCATED ON UNIT NAMEPLATE</b>					
<b>INDOOR FAN — TYPE</b>	CENTRIFUGAL	CENTRIFUGAL	CENTRIFUGAL	CENTRIFUGAL	CENTRIFUGAL	CENTRIFUGAL
Dia. x Width (in.)	10 x 10	10 x 10	11 x 10	10 x 10	10 x 10	11 x 10
Drive/No. Speeds	DIRECT / VARIABLE	DIRECT / VARIABLE	DIRECT / VARIABLE	DIRECT / VARIABLE	DIRECT / VARIABLE	DIRECT / VARIABLE
CFM @ 0.0 in. w.g. <sup>(f)</sup>	SEE FAN PERFORMANCE TABLE					
Motor—HP/R.P.M.	1/2/VARIABLE	3/4 /VARIABLE	1/VARIABLE	1/2/VARIABLE	3/4 /VARIABLE	1/VARIABLE
Volts/Ph/Hz	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60
F.L. Amps/L.R Amps	4.3 / 4.3	6.8 / 6.8	6.9 / 6.9	4.3 / 4.3	6.8 / 6.8	6.9 / 6.9
<b>FILTER/ FURNISHED</b>	NO	NO	NO	NO	NO	NO
Type Recommended	THROWAWAY	THROWAWAY	THROWAWAY	THROWAWAY	THROWAWAY	THROWAWAY
Recmd. Face Area (sq. ft) <sup>(g)</sup>	4.0	5.3	5.3	4.0	5.3	5.3
<b>REFRIGERANT</b>	R-454B	R-454B	R-454B	R-454B	R-454B	R-454B
Charge (lbs.)	<b>LOCATED ON UNIT NAMEPLATE</b>					
Subcooling	12° F	11° F	10° F	12° F	11° F	10° F

(a) Rated in accordance with AHRI 210/240-2023.

(b) Rated in accordance with D.O.E. test procedure.

(c) Sound Power values are not adjusted for AHRI 270-95 tonal corrections.

(d) Calculated in accordance with currently prevailing Nat'l Electrical Code.

(e) Standard Air — Dry Coil — Outdoor.

(f) Standard Air — Dry Coil — Indoor

(g) Filters must be installed in return air stream. Square footages listed are based on 300 f.p.m. face velocity. If permanent filters are used size per manufacturer's recommendation with a clean resistance of 0.05" W.C.

## Charging in Cooling above 55°F OD Ambient

If servicing the equipment requires system evacuation, then re-charge the system to the weight specified on the nameplate. Verify the system subcooling using the Subcooling Charging Table and, if necessary, adjust the charge using the procedure below.

1. For best results — the indoor temperature should be kept between 70°F to 80°F. Add system heat if needed.
2. Whenever charge is removed or added, the system must be operated for a minimum of 20 minutes to stabilize before accurate measurements can be made.
3. Measure Liquid Line Temperature and Refrigerant Pressure at service valved in the compressor compartment.
4. Locate your liquid line temperature in the left column of the table, and the intersecting liquid line

pressure under the subcool value column, Add refrigerant to raise the pressure to match the table, or remove refrigerant to lower the pressure. Again, wait 20 minutes for the system conditions to stabilize before adjusting charge again.

**Note:** System charge shall never be more than 110% or less than 90% of nameplate charge. If specified subcooling cannot be achieved within those charge bounds, contact your Field Service Representative.

5. When system is correctly charged, you can refer to System Pressure Curves to verify typical performance.

### CHARGING BELOW 55°F

Evacuate system and weigh in nameplate charge or use factory charge. Correct subcooling may be verified when the temperature is above 55°F.

R-454B REFRIGERANT CHARGING CHART									
LIQUID TEMP (°F)	DESIGN SUBCOOLING (°F)								
	6	7	8	9	10	11	12	13	14
	LIQUID GAGE PRESSURE (PSI)								
55	164	167	170	172	175	178	181	184	187
60	178	181	184	187	190	194	197	200	203
65	193	197	200	203	206	210	213	217	220
70	210	213	217	220	223	227	230	234	238
75	227	230	234	238	241	245	249	252	256
80	245	249	252	256	260	264	268	272	276
85	264	268	272	276	280	284	288	292	297
90	284	288	292	297	301	305	309	314	318
95	305	309	314	318	323	327	332	336	341
100	327	332	336	341	346	351	355	360	356
105	351	355	360	365	370	375	380	385	390
110	375	380	385	390	396	401	406	412	417
115	401	406	412	417	422	428	433	439	445
120	428	433	439	445	450	456	462	468	474
125	456	462	468	474	480	486	492	498	504

### Charging Below 55°F OD Ambient in Heating Only

1. The Subcool Charging Method in cooling is NOT recommended below 55°F outdoor ambient.
2. The only recommended method of charging at outdoor ambients below 55°F, is to weigh in the charge in the heating mode.
3. Use Nameplate charge.
4. Check liquid line temperature and pressure (at the OD valves) to obtain a minimum of the subcooling shown in the subcooling table.
5. Add charge if the minimum subcooling as shown in the table is not obtained with the nameplate charge.
6. It is important to return in the spring or summer to accurately charge the system in the cooling mode at outdoor ambients above 55°F.

### WARNING


#### Refrigerant under High Pressure!

Failure to follow instructions below could result in an explosion which could result in death or serious injury or equipment damage.

System contains oil and refrigerant under high pressure. Recover refrigerant to relieve pressure before opening the system. See unit nameplate for refrigerant type. Do not use non-approved refrigerants, refrigerant substitutes, or refrigerant additives.

# Determine Unit Clearances

Figure 1. Space on sides requirements

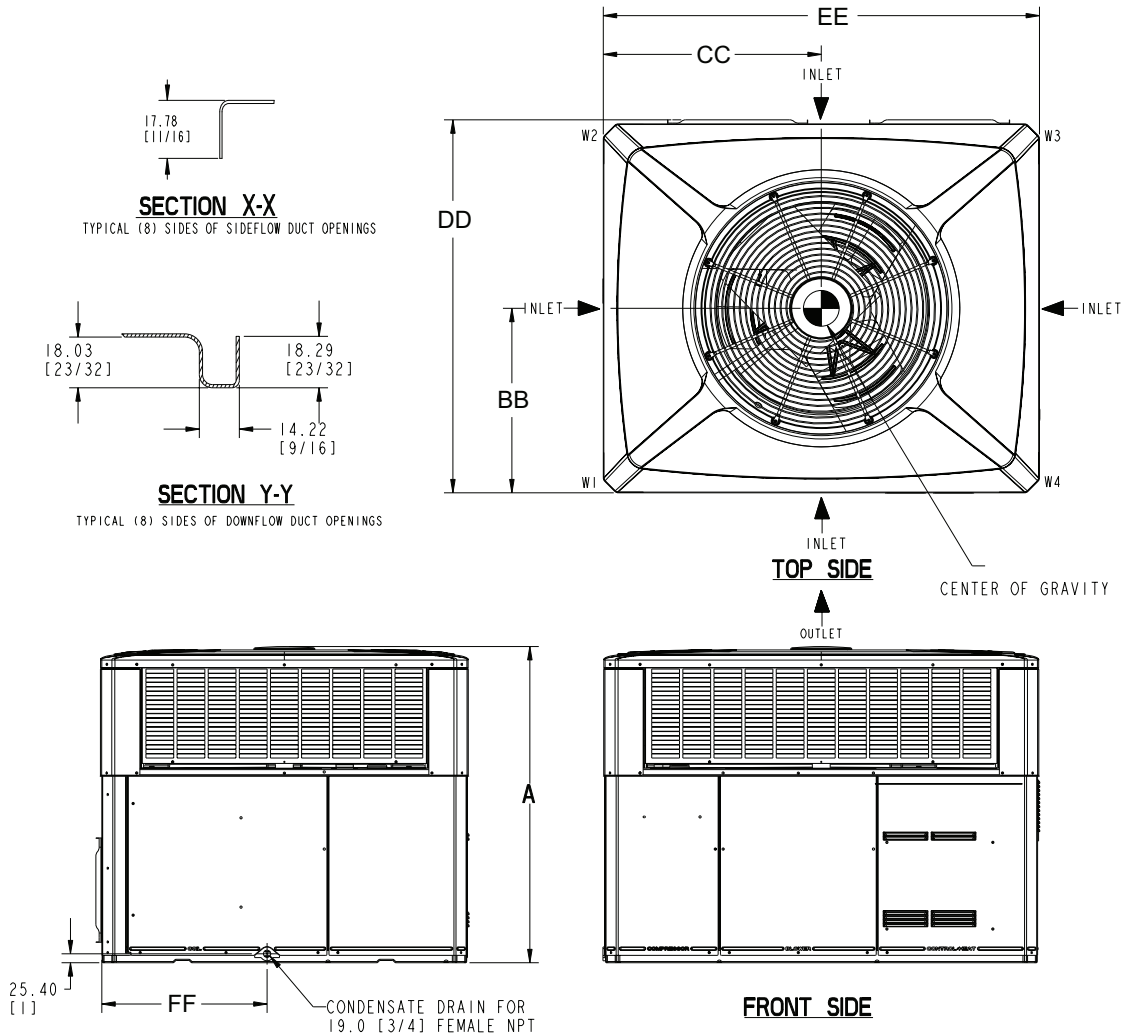


	2 - 3 TON Units		3.5 - 5 TON Units	
	RECOMMENDED SERVICE CLEARANCE mm [Inches]			
	W/ ECONOMIZER		W/ ECONOMIZER	
BACK SIDE	305 [12]	762 [30]	305 [12]	762 [30]
LEFT SIDE	762 [30]	914 [36]	914 [36]	1067 [42]
RIGHT SIDE	610 [24]	-	610 [24]	-
FRONT SIDE	1067 [42]	-	762 [30]	-
	CLEARANCE TO COMBUSTIBLE MATERIAL mm [Inches]			
BOTTOM	0		0	
BACK SIDE	25 [1]		25 [1]	
LEFT SIDE	152 [6]		152 [6]	
RIGHT SIDE	152 [6]		152 [6]	
FRONT SIDE	305 [12]		305 [12]	
TOP	914 [36]		914 [36]	
	DIMENSIONS mm [Inches]			
A	HEIGHT OF UNIT - TABLE NEXT PAGE			
BB	CENTER OF GRAVITY - TABLE NEXT PAGE			
CC	CENTER OF GRAVITY - TABLE NEXT PAGE			
DD -Depth	1093.72 [43-1/16]*		1173.99 [46-1/4]*	
EE -Width	1284.99 [50-5/8]*		1535.94 [60-1/2]*	
FF	497.8 [19-5/8]		576.00 [22-11/16]	

\* Subtract 50.8 [2] for 3 phase models due to metal louvers.

\* Subtract 50.8 [2] for 3 phase models due to metal louvers.

## Determine Unit Clearances

Figure 2. Bottom and back duct openings

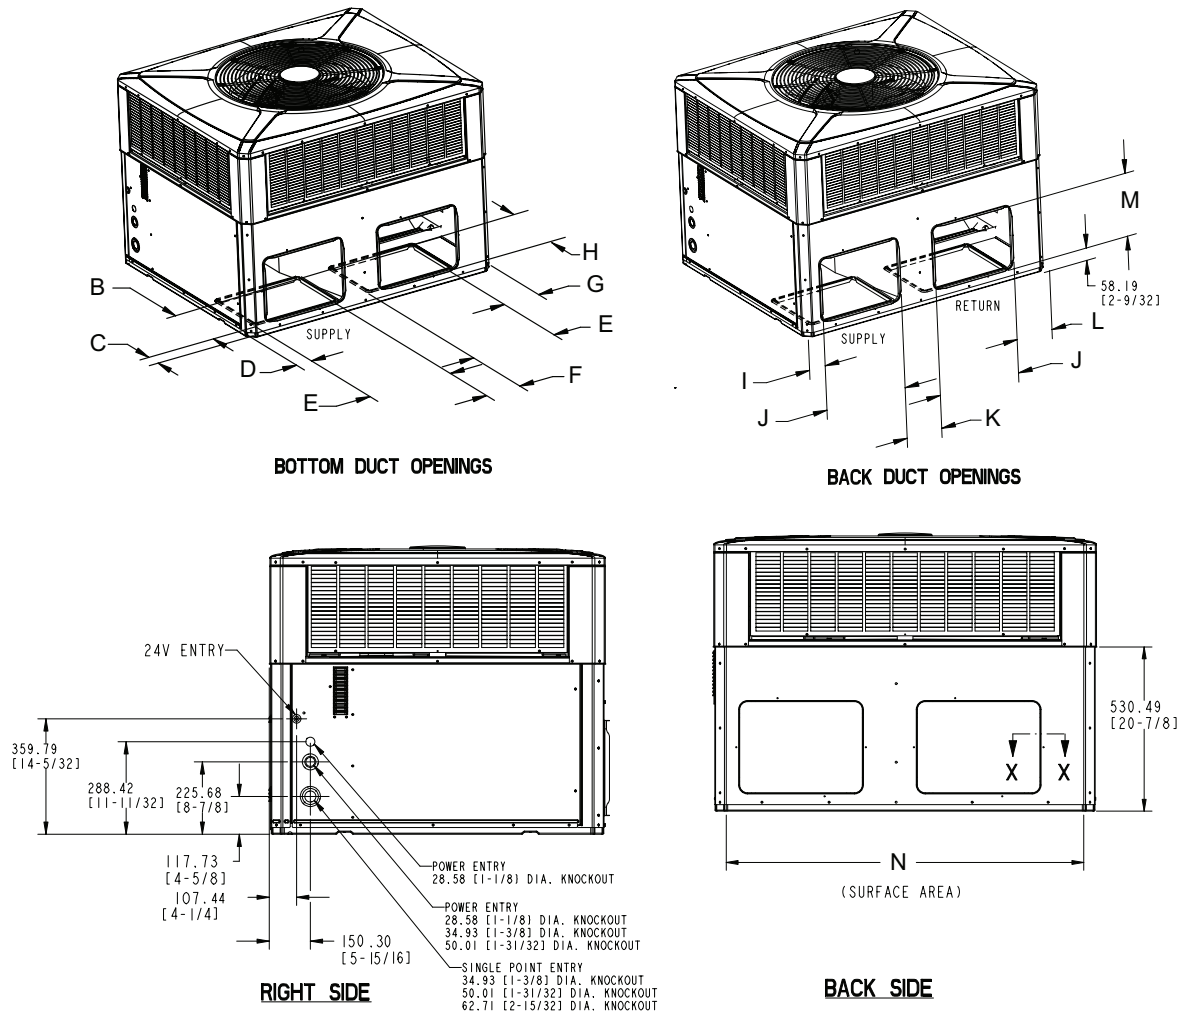

	PHYSICAL DIMENSIONS mm (in)													
	A	B	C	D	E	F	G	H	I	J	K	L	M	N
5WCZ5024														
5WCZ5030	949.33 (37.37)	304.80 (12.0)	92.33 (3.63)	66.51 (2.62)	406.40 (16.0)	167.89 (6.61)	173.46 (6.83)	304.80 (12.0)	48.35 (1.90)	398.22 (15.67)	176.07 (6.93)	176.68 (6.95)	296.62 (11.67)	1155.45 (45.49)
5WCZ5036														
5WCZ5042														
5WCZ5048	1050.93 (41.37)	457.20 (18.0)	75.41 (2.96)	75.41 (2.96)	381.00 (15.0) 457.20 (18.0)	244.09 (9.61)	318.75 (12.56)	381.00 (15.0)	86.25 (3.39)	449.02 (17.67)	176.07 (6.93)	329.58 (12.97)	372.82 (14.67)	1351.95 (53.22)
5WCZ5060														

	Corner Weights KG/LBS				SHIPPING WEIGHT KG/LBS	UNIT WEIGHT KG/LBS	Center Of Gravity mm[inch]	
	W1	W2	W3	W4			BB	CC
5WCZ5024	62.2 [137]	38.1 [84]	27.2 [60]	42.6 [94]	201.8 [445]	170.1 [375]	401.3 [15.8]	508 [20]
5WCZ5030	63.6 [140]	38.1 [84]	27.2 [60]	42.6 [94]	203.2 [448]	171.5 [378]	401.3 [15.8]	508 [20]
5WCZ5036*1	62.7 [138]	38.1 [84]	27.2 [60]	42.6 [94]	214.1 [472]	170.6 [376]	401.3 [15.8]	508 [20]
5WCZ5042	83.9 [185]	40.8 [90]	30.8 [68]	52.2 [115]	265.8 [586]	207.7 [458]	414.0 [16.3]	635 [25]
5WCZ5048*1	96.2 [212]	40.8 [90]	30.8 [68]	52.2 [115]	278.1 [613]	220.0 [485]	414.0 [16.3]	635 [25]
5WCZ5060*1	82.1 [181]	47.6 [105]	35.8 [79]	60.8 [134]	284.4 [627]	226.3 [499]	414.0 [16.3]	635 [25]
5WCZ5036*3	61.2 [135]	38.1 [84]	27.2 [60]	42.6 [94]	212.6 [469]	169.1 [373]	401.3 [15.8]	508 [20]
5WCZ5048*3	94.4 [208]	40.8 [90]	30.8 [68]	52.2 [115]	276.3 [609]	218.2 [481]	414.0 [16.3]	635 [25]
5WCZ5060*3	80.4 [177]	47.6 [105]	35.8 [79]	60.8 [134]	282.7 [623]	224.6 [495]	414.0 [16.3]	635 [25]
5WCZ5036*4	66.6 [147]	38.1 [84]	27.2 [60]	42.6 [94]	218.1 [481]	174.5 [385]	401.3 [15.8]	508 [20]
5WCZ5048*4	104.0 [229]	40.8 [90]	30.8 [68]	52.2 [115]	285.8 [630]	227.8 [502]	414.0 [16.3]	635 [25]
5WCZ5060*4	89.9 [198]	47.6 [105]	35.8 [79]	60.8 [134]	292.2 [644]	234.1 [516]	414.0 [16.3]	635 [25]

# Review Location and Recommendation Information

**Note:** *There is no declared maximum altitude for operating the appliance.*

## Horizontal Airflow Units

1. Location of the unit must allow service clearance around it to ensure adequate serviceability, maximum capacity, and peak operating efficiency.
2. These units are designed for outdoor installation. They may be installed directly on a slab, wood flooring, or on Class A, B, or C roof covering material. The discharge air from the condenser fans must be unrestricted for a minimum of 3 feet above the unit.
3. Exhaust vents or other sources of contaminated air should not be near the unit's air inlet if outside air is to be introduced as make-up air or a ventilation feature is to be used. Contamination from exhaust vents or chimneys may also foul the condenser causing degraded performance.
4. Check the handling facilities to ensure the safety of personnel and the unit(s).
5. The unit must be mounted level for proper drainage of water through the drain holes in the base pan.
6. The unit should not be exposed to direct roof water runoff.
7. Flexible duct connectors must be of a flame retardant material. All ductwork outside of the structure must be insulated and weatherproofed in accordance with local codes.
8. Holes through exterior walls or roof must be sealed in accordance with local codes.
9. All fabricated outdoor ducts should be as short as possible.

## Clearances

1. The recommended clearances for single-unit installations are illustrated in ["Determine Unit Clearances," p. 13.](#)
2. Any reduction of the unit clearances indicated in these figures may result in condenser coil starvation or the recirculation of warm condenser air. Actual clearances, which appear to be inadequate should be reviewed with a local engineer.
3. See the unit's nameplate for the absolute minimum clearance between the unit and any combustible surfaces.

## Down Airflow Units

1. Location of the unit must allow service clearance around it to ensure adequate serviceability, maximum capacity, and peak operating efficiency.
2. Refer to the Installation section for instruction on converting the supply and return airflow covers to down airflow.

3. The field assembled Roof Mounting Curb (BAYCURB050 or BAYCURB051) or a field fabricated curb should be in place before the unit is hoisted to the roof top.  
The Roof Mounting Curb (frame) must be installed on a flat, level section of the roof (maximum of 1/4" per foot pitch) and provide a level mounting surface for the unit. Also, be sure to provide sufficient height above the roof to prevent water from entering the unit.
4. Be sure the mounting curb spans structural members (trusses) of the roof, thereby providing sufficient support for the weight of the unit, the curb, the duct(s), and any factory or field installed accessories.
5. The unit must be mounted level for proper drainage of water through the drain holes in the base pan.
6. Be sure the hole in the structure for the ducts is large enough to accommodate the fabricated ducts and the insulation surrounding them. Flexible duct connectors must be of a flame retardant material. All ductwork outside of the structure must be insulated and weatherproofed in accordance with local codes.
7. Holes through exterior walls or roof must be sealed in accordance with local codes.
8. These units are design certified for outdoor installation. They may be installed directly on a slab, wood flooring, or on Class A, B, or C roof covering material. The discharge air from the condenser fans must be unrestricted for a minimum of 3 feet above the unit.
9. Exhaust vents or other sources of contaminated air should not be near the unit's air inlet if outside air is to be introduced as make-up air or a ventilation feature is to be used. Contamination from exhaust vents or chimneys may also foul the condenser causing degraded performance.
10. Check the handling facilities to ensure the safety of personnel and the unit(s).

## Clearances

1. The recommended clearances for single-unit installations are illustrated in ["Determine Unit Clearances," p. 13.](#)
2. Any reduction of the unit clearances indicated in these figures may result in condenser coil starvation or the recirculation of warm condenser air. Actual clearances, which appear to be inadequate should be reviewed with a local engineer.
3. See the unit's nameplate for the absolute minimum clearance between the unit and any combustible surfaces.

## Refrigerant Leak Detection System

For all tables contained in this section of the manual, the refrigerant charge is the total system charge which is marked on the unit nameplate.

### **⚠ WARNING**

#### **Risk of Fire — Flammable Refrigerant!**

Failure to follow instructions below could result in death or serious injury, and equipment damage.

- To be repaired only by trained service personnel.
- Do not puncture refrigerant tubing.
- Dispose of properly in accordance with federal or local regulations.

### **⚠ WARNING**

#### **Leak Detection System Installed!**

Failure to follow instructions below could result in death or serious injury or equipment damage.

The unit is equipped with electrically powered safety measures and must be powered at all times after installation, except during servicing, to detect any leak.

To ensure safety of the building occupants, the packaged unit is equipped with a refrigerant leak

detection system. The system is comprised of a refrigerant sensor and a mitigation control board. The system automatically detects leaks in the indoor coil and initiates actions to mitigate the risk of ignition of the leaked refrigerant, including:

- Turning on the blower of the indoor unit to dilute leaked refrigerant;
- Fully opening any zoning dampers, when applicable;
- Turning off the compressor of the outdoor unit;
- De-energizing potential sources of ignition connected to the system;
- Energizing an audible alarm, if so equipped. Examples of potential ignition sources that are de-energized include electrostatic air cleaners.

### **Minimum Conditioned Space**

The installer must verify that the total space conditioned by the system is large enough to safely dilute any leaked refrigerant in the event of a refrigerant leak of the indoor coil.

The minimum space conditioned by the appliance shall be according to [Table 1, p. 16](#). The conditioned space includes any parts of the space connected via an air duct system. The altitude of installation is the altitude above sea level of the site where the equipment is installed.

**Table 1. Minimum space conditioned by the appliance**

	Altitude (ft)								
	Sea Level — 2,000	2,001 — 4,000	4,001 — 6,000	6,001 — 8,000	8,001 — 10,000	10,001 — 12,000	12,001 — 14,000	14,001 — 15,000	Above 15,000
Charge (lb)	Minimum Conditioned Space (ft <sup>2</sup> )								
4	63	66	70	74	79	85	91	94	98
5	79	83	88	93	99	106	113	118	122
6	95	100	105	112	119	127	136	141	147
7	110	116	123	130	138	148	159	165	171
8	126	133	140	149	158	169	181	188	196
9	142	149	158	167	178	190	204	212	220
10	158	166	175	186	198	211	227	235	245
11	173	183	193	205	218	232	249	259	269
12	189	199	211	223	237	254	272	282	294
13	205	216	228	242	257	275	295	306	318
14	221	232	246	260	277	296	318	330	343
15	236	249	263	279	297	317	340	353	367



# Unit Installation

**Note:** The factory ships this unit for horizontal installation.

## Ground Level Installation

1. Place the unit on a pad the size of the unit or larger. The unit must be mounted level for proper drainage of water through the holes in the base pan. To attach the unit securely to the slab, use extreme mounting kit, BAYEXMK003. Usage of the extreme mounting kit accessories is a recommendation, not a requirement.

The pad must not come in contact with the structure. Be sure the outdoor portion of the supply and return air ducts are as short as possible. As indicated in Table 4, p. 19, vibration support is a recommendation, not a requirement.

2. Location of the unit must allow service clearance around it. Clearance of the unit must be given careful consideration. See “Determine Unit Clearances,” p. 13.

**Note:** Any reduction of the unit clearances indicated in these illustrations may result in condenser coil starvation or the recirculation of warm condenser air. Actual clearances, which appear to be inadequate should be reviewed with a local engineer.

**Important:** A minimum 0" clearance to combustible material shall be maintained on air outlet duct.

**Important:** 1" clearance to combustible material for first three feet of air outlet duct length is required for 5WCZ5060A4 460V unit when an electrical heater is installed, see unit nameplate for details. For the other units, a minimum 0" clearance to combustible material shall be maintained on air outlet duct.

3. Attach the supply and return air ducts to the unit as explained in the ductwork Installation section.

4. Flexible duct connectors must be of a flame retardant material. Insulate any ductwork outside of the structure with at least two (2) inches of insulation and weatherproof. There must be a weatherproof seal where the duct enters the structure.
5. Do not expose the unit to direct roof water runoff.
6. Seal all holes through exterior walls in accordance with local codes.
7. Continue with the following installation sections to complete the installation: Ductwork, Filter and Electrical Wiring.

## Rooftop Installation — Curb Mounting

### Convert Horizontal Airflow to Down Airflow

The factory ships the unit for horizontal airflow. Perform this procedure to convert it to down airflow:


1. Remove the three (3) sheet metal screws securing the supply air cover and the four (4) sheet metal screws securing the return air cover from the base of the unit. Remove the covers from the base.
2. Place the covers over the horizontal supply and return openings (painted side out). Align the screw holes, and secure using the same screws removed in step 1.

### Install Full Perimeter Roof Mounting Curbs


1. Verify that the roof mounting curb is correct for the unit. There are two curbs depending on the unit cabinet sizes:
  - 5WCZ5024–036 use model BAYCURB050,
  - 5WCZ5042–060 use model BAYCURB051
2. Assemble and install the curb following the instructions in the Installer's Guide included with the appropriate curb.

**Table 2. Typical ground level application**

**Note:** Use the extreme mounting kit, BAYEXMK002, to secure the unit to the slab.

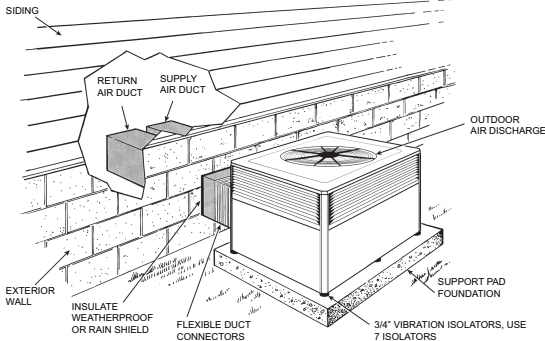

**Table 3. Converting horizontal to down airflow**

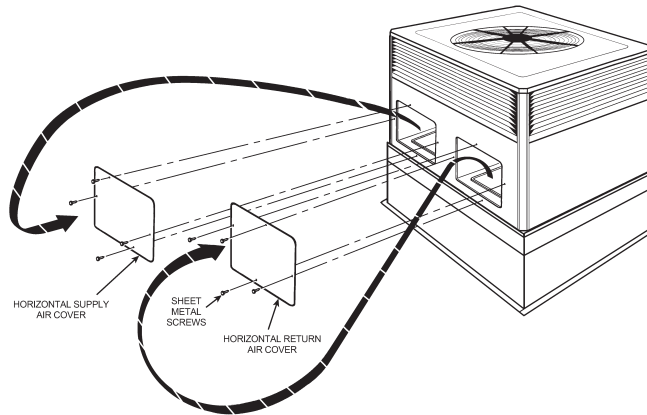

### Lifting and Rigging

#### ⚠ WARNING

##### Improper Unit Lift!

Failure to properly lift unit in a **LEVEL** position could result in unit dropping and possibly crushing operator/technician which could result in death or serious injury, and equipment or property-only damage.

Test lift unit approximately 24 inches (61 cm) to verify proper center of gravity lift point. To avoid dropping of unit, reposition lifting point if unit is not level.

**Important:** Do not lift the unit without test lifting for balance and rigging. Do not lift the unit in windy conditions or above personnel. Do not lift the unit by attaching clevis, hooks, pins, or bolts to the unit casing, casing hardware, corner lugs, angles, tabs, or flanges. Failure to observe these warnings may result in equipment damage.

- Before preparing the unit for lifting, check the unit dimension drawings for center of gravity for lifting safety (["Determine Unit Clearances," p. 13](#)). Because of placement of internal components, the unit's weight may be unevenly distributed. Approximate unit weights are also provided in the unit drawings.

**Note:** Unit rigging and hoisting requires accessory kit BAYLIFT002. It includes a kit of four (4) lifting lugs.

- Insert the four lifting lugs in the openings provided in the drip lip on each end of the unit. A tap or jerk to the lug will overcome the interference that arises due to the dimple on the lug.
- When hoisting the unit, be sure that a proper method of rigging is used. Use slings and spreader bars for protection during lifting. Always test-lift the

unit to determine the exact unit balance and stability before hoisting it to the installation location.

- When the curb and air ducts have been properly installed, the unit is ready to be hoisted to the roof and set in position.

#### Important:

- To prevent damage to the sides and top of the unit when hoisting use "spreader bars".
- The unit must be lowered into position. The P.V.C. rubber tape on the curb flange permits the unit to be repositioned if required without destroying the P.V.C. rubber seals affixed to the mounting curb.

#### Placing the Unit on the Mounting Curb

- The unit is designed with a perimeter drip lip that is lower than the unit base pan, see ["Lifting and Rigging," p. 18](#).
- Position the unit drip lip down over and in contact with the outside corner of the curb.. Continue to lower the unit on top of the curb, with the unit drip lip astraddle, and in contact with, both the end and side rail of the curb. The unit should now rest on top of the curb. Consider using the extreme mounting kit, BAYEXMK001, to add additional hold down strength to the mounting.

#### Notes:


- For rooftop applications, the use of extreme mounting kits and vibration isolators is optional and not mandatory.
- The ductwork is installed as part of the curb installation. Do not attach ductwork to the unit and lower the unit with ductwork onto the curb.

**Table 4. Vibration isolators/Snow feet locations**


**Note:** The installation instructions indicate typical installation only, but actual installation may differ.

**Note:** These views represent the base as viewed looking up from underneath the unit.

**Important:** Unit vibration isolator support is recommended in the general areas shown. Locate 3/4" thick vibration isolators on the bottom of the basepan as illustrated by black dots for ground level pad applications. Modify vibration isolator location as necessary for frame and rail applications.

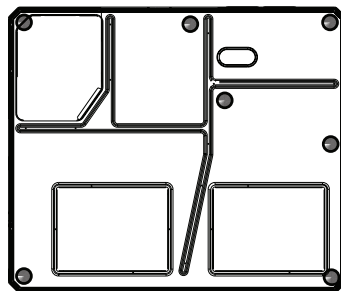

Small Cabinet  
\*\*\*\*4024 - 4036

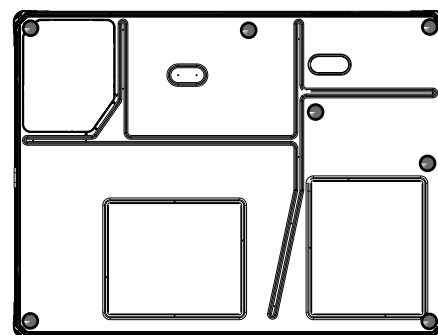

Medium Cabinet  
\*\*\*\*4042 - 4060

## Rooftop Installation — Frame Mounting

For rooftop applications using field fabricated frame and ducts use the following procedure:

1. Locate and secure the frame to the roof by bolting or welding. Frame must provide adequate center support via a cross member centrally located channel rail. See [Table 8, p. 21](#). Vibration isolators should be installed as indicated in [Table 4, p. 19](#), adjust as necessary for your frame. The isolators must be placed on base pan, not drip lip. Add flashing as required. Flashing must conform to local building codes.
2. Prepare the hole in the roof in advance of installing the unit.
3. Secure the horizontal or down airflow ducts to the roof. Refer to the previous Convert from Horizontal Airflow to Down Airflow section if conversion is needed.
4. All fabricated outdoor ducts should be as short as possible.
5. Place the unit on the frame.
6. The unit must be mounted level for proper drainage of water through the holes in the base pan.
7. Secure the unit to the frame.
8. Insulate any ductwork outside of the structure with at least two (2) inches of insulation and then weatherproof. There must be a weatherproof seal where the duct enters the structure.
9. The unit should not be exposed to direct roof water runoff.
10. Flexible duct connectors must be of a flame retardant material. All ductwork outside of the structure must be insulated and weatherproofed in accordance with local codes.
11. Access and service clearances for the unit must be given careful consideration when locating the duct

entrance openings. "[Determine Unit Clearances,](#)" [p. 13](#) provide unit dimensions.

12. Continue with the following installation sections to complete the installation: Ductwork, Filter, and Electrical Wiring.

## Rooftop Installation — No Curb/Frame

For roof top applications using field fabricated ducts and sleeper rails rather than a curb or frame, use the following procedure:

1. Locate and secure the sleeper rails to the roof by bolting (three (3) rails required). One on each end to support the edges of the unit and one across the center of the unit. The center rail must run inside both drip lips. Vibration isolators should be installed, adjust as necessary for your sleeper rails. The isolators must be placed on base pan, not drip lip. Add flashing as required. Flashing must conform to local building codes.
2. Prepare the hole in the roof in advance of installing the unit.
3. Secure the horizontal or down airflow ducts to the roof. Refer to the previous Convert from Horizontal Airflow to Down Airflow section if conversion is needed.
4. All fabricated outdoor ducts should be as short as possible.
5. Place the unit on the rails.
6. The unit must be mounted level for proper drainage of water through the holes in the base pan.
7. Secure the unit to the rails.
8. Insulate any ductwork outside of the structure with at least two (2) inches of insulation and then weatherproof. There must be a weatherproof seal where the duct enters the structure.
9. No exposure to direct roof water runoff.

# Unit Installation

10. Flexible duct connectors must be of a flame retardant material. All ductwork outside of the structure must be insulated and weatherproofed in accordance with local codes.
11. Access and service clearances for the unit must be

given careful consideration when locating the duct entrance openings. [“Determine Unit Clearances,”](#) p. 13 provide unit dimensions.

12. Continue with the following installation sections: Ductwork, Filter and Electrical Wiring.

Table 5. Lifting and rigging


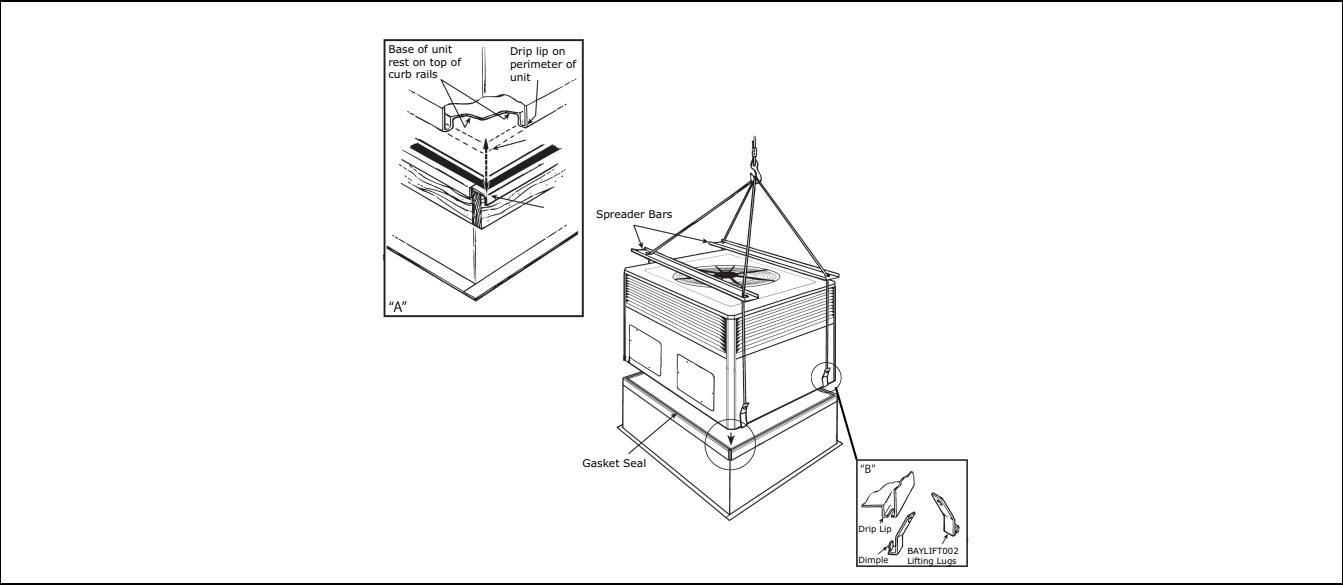


Table 6. Curb dimensions

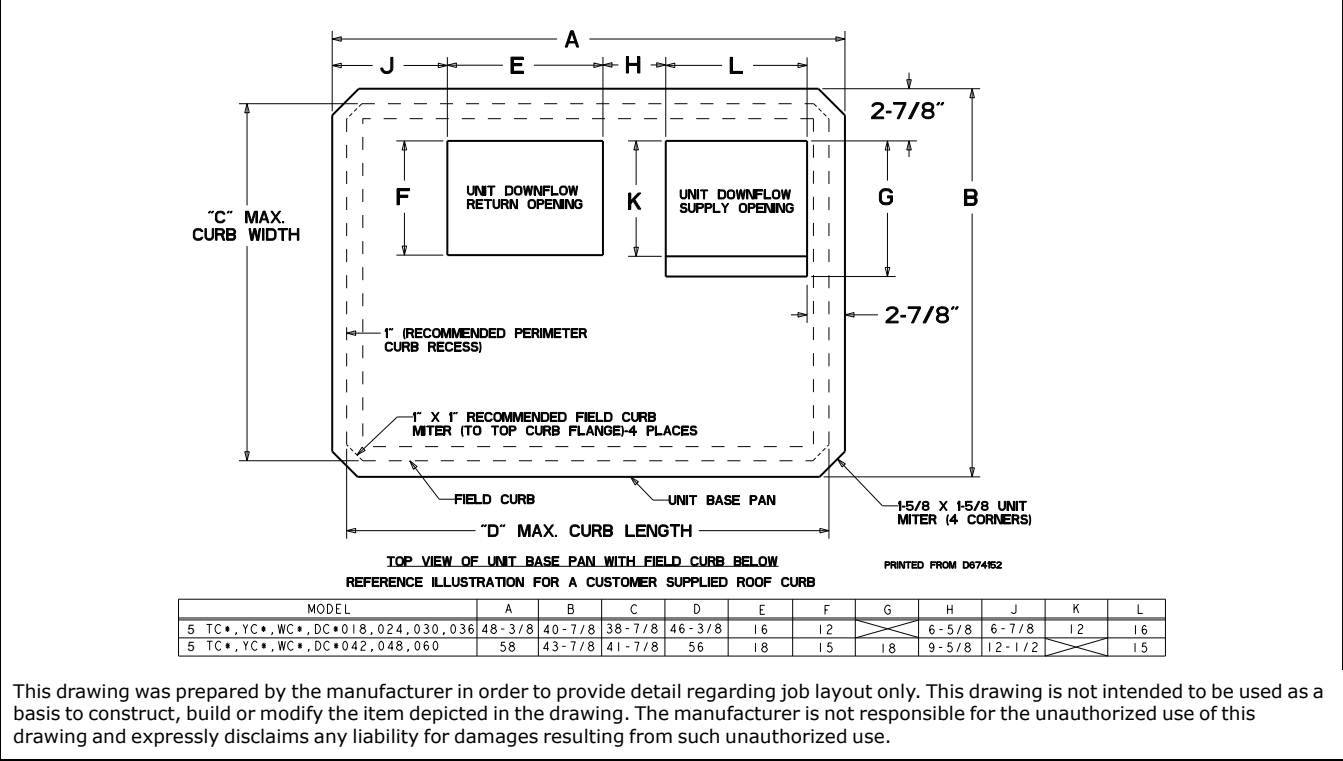

This drawing was prepared by the manufacturer in order to provide detail regarding job layout only. This drawing is not intended to be used as a basis to construct, build or modify the item depicted in the drawing. The manufacturer is not responsible for the unauthorized use of this drawing and expressly disclaims any liability for damages resulting from such unauthorized use.

Table 7. Typical rooftop horizontal airflow application with frame


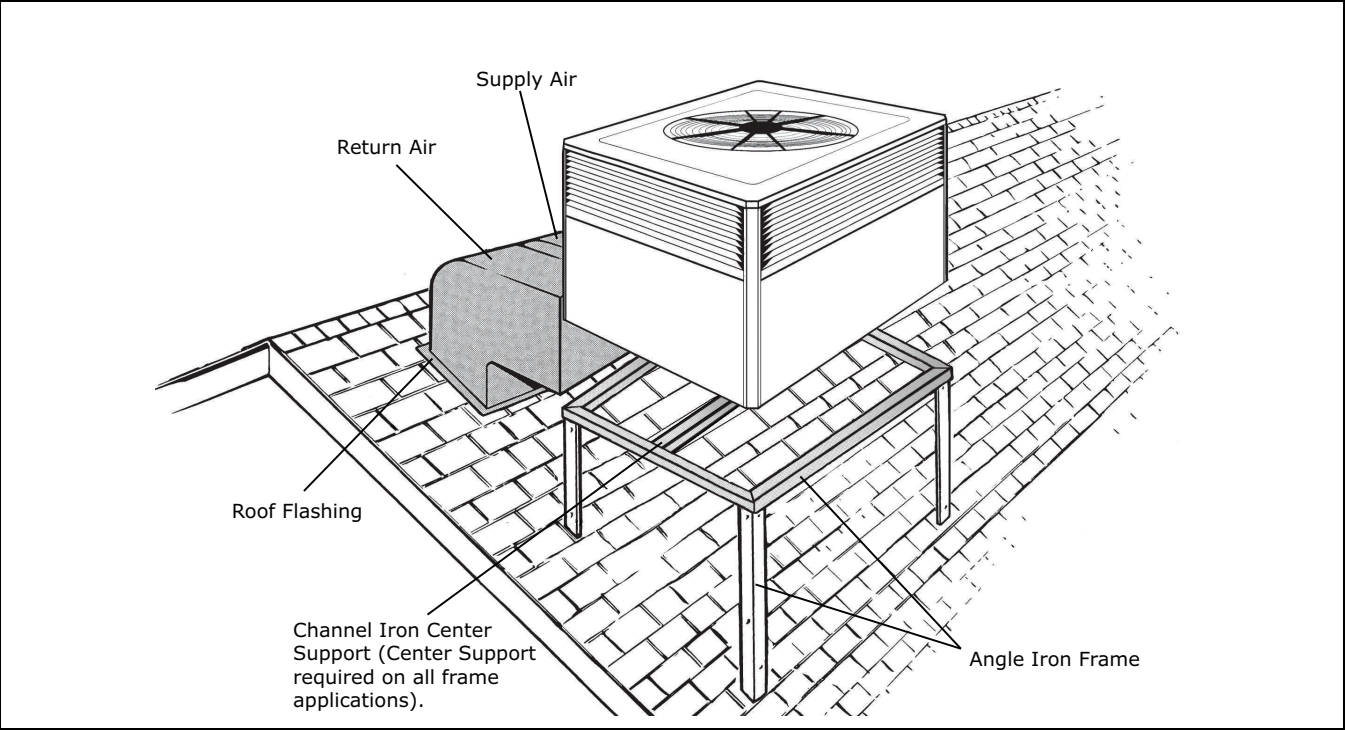


Table 8. Typical rooftop down airflow application with frame



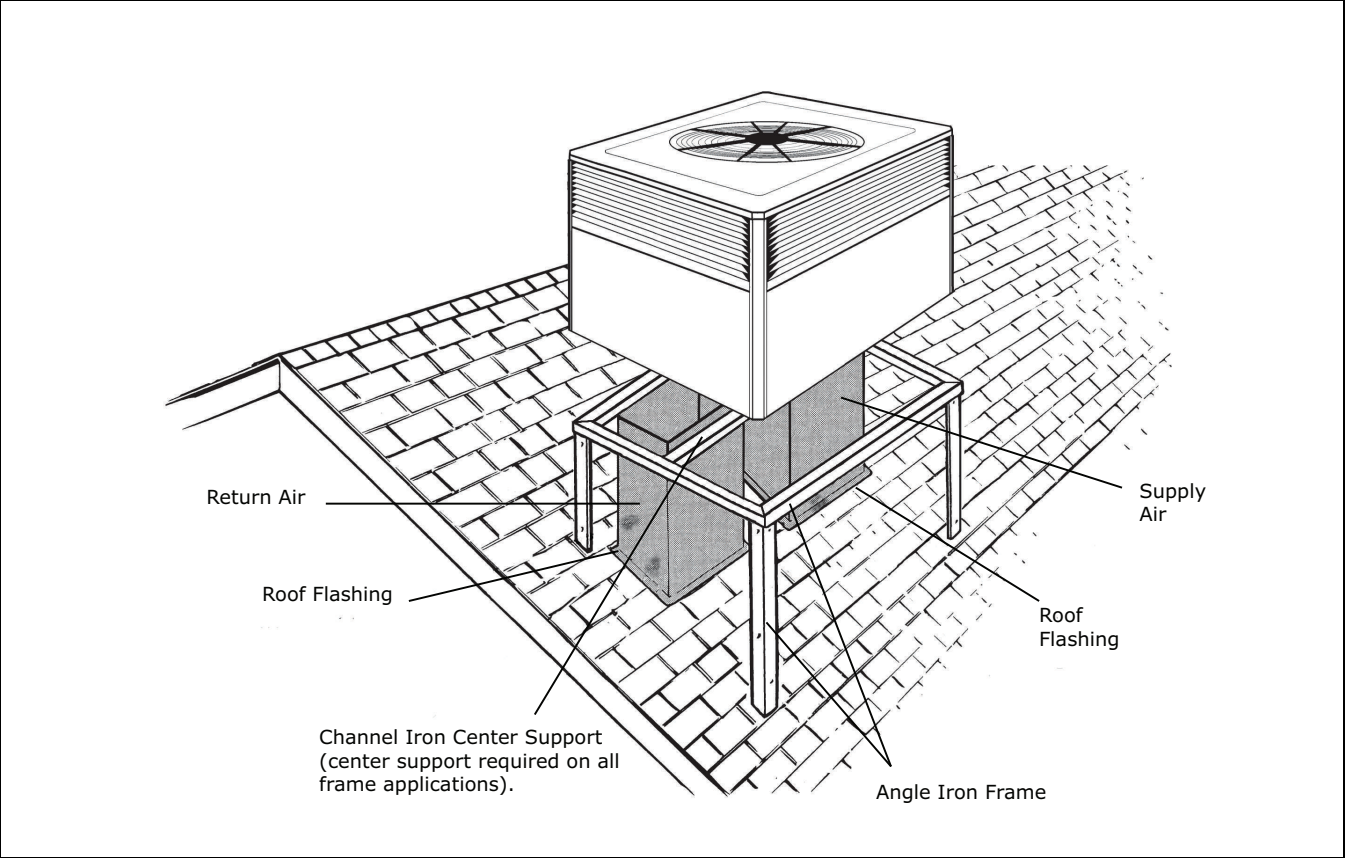

### Ductwork Installation

#### Attaching Downflow Ductwork to Roof Curb

Supply and return air flanges are provided on the roof curb for easy duct installation. All ductwork must be run and attached to the curb before the unit is set into place. Refer to the Roof Mounting Curb Installer's Guide for details.

#### Attaching Downflow Ductwork to Roof Frame

Follow these guidelines for ductwork construction:


Connections to the unit should be made with three (3) inch canvas connectors to minimize noise and vibration transmission.

Elbows with turning vanes or splitters are recommended to minimize air noise and resistance.

The first elbow in the ductwork leaving the unit should be no closer than two (2) feet from the unit, to minimize noise and resistance.

To prevent leaking, do not attach the ductwork to the bottom of the unit base. Refer to the bottom example in the figure below.

**Figure 3. Attaching down airflow ductwork**

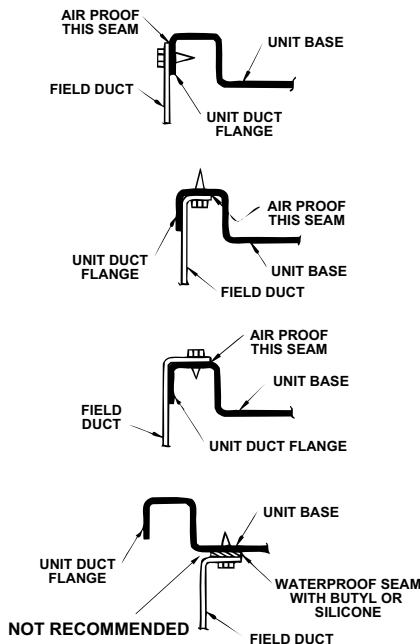


#### Attaching Horizontal Ductwork to Unit

All conditioned air ductwork should be insulated to minimize heating and cooling duct losses. Use a minimum of two (2) inches of insulation with a vapor barrier. The outside ductwork must be weatherproofed between the unit and the building.

When attaching ductwork to a horizontal unit, provide a flexible watertight connection to prevent noise transmission from the unit to the ducts. The flexible connection **must** be indoors and made out of heavy canvas.

**Note:** Do not draw the canvas taut between the solid ducts.

**Figure 4. Attaching horizontal airflow ductwork**

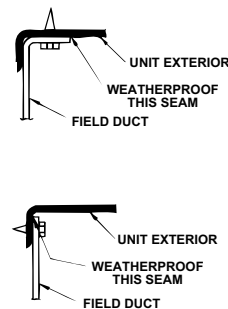

### Condensate Drain Piping


A 3/4-inch female NPT condensate drain connection is provided on the evaporator access panel end of the unit. Provide a trap and fill it with water before starting the unit to avoid air from being drawn through. Follow local codes and standard piping practices when running the drain line. Pitch the line downward away from the unit. Avoid long horizontal runs. See [Figure 5, p. 22](#).

**Note:** Do not use reducing fittings in the drain lines.

The condensate drain must be:

- Made of 3/4" pipe size
- Pitched 1/4" per foot to provide free drainage to convenient drain system
- Trapped
- Must be connected to a closed drain system unless the trap is properly vented

**Figure 5. Typical condensate drain piping**

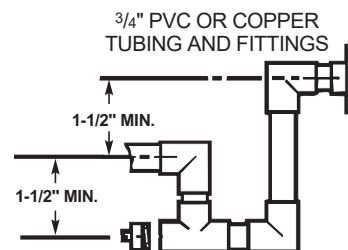

### Air Filter Installation

The packaged unit requires an air filter. The unit does not come with a factory installed filter rack in it, however, two filter frame accessories are offered that will allow the installation of a filter within the unit, BAYFLTR101 & BAYFLTR201. Otherwise a field

supplied filter rack must be installed by the installer in the return ductwork. Refer to table for field supplied filter racks.

**Table 9. Filter sizes (field supplied filter rack)**

UNIT	NOMINAL CFM	FILTER <sup>(a)</sup> SIZE (Sq Ft)	FILTER RESISTANCE ("W.C.)
5WCZ5024	800	2.67	0.08
5WCZ5030	1000	3.33	0.08
5WCZ5036	1200	4.00	0.08
5WCZ5042	1400	4.67	0.08
5WCZ5048	1600	5.33	0.08
5WCZ5060	2000	6.67	0.08

<sup>(a)</sup> Filters must be installed in the return air system. The above square footages are based on 300 F.P.M. face velocity. If permanent filters are used, size per mfg. Recommendation with clear resistance of 0.05"W.C.

## Electrical Wiring

**Note:** This unit is factory wired for 230V. See wiring diagram for 208V conversion.

### Electrical Connections

Electrical wiring and grounding must be installed in accordance with local codes or, in the absence of local codes, with the National Electrical Code ANSI/NFPA 70, Latest Revision.

### Electrical Power

It is important that proper electrical power be available for the unit. Voltage variation should remain within the limits stamped on the unit nameplate.

### Disconnect Switch

Provide an approved weatherproof disconnect within close proximity and **within sight of the unit**. If disconnect must be mounted to the cabinet, the location shown in [Table 12, p. 23](#) should be the only one considered.

### Over Current Protection

The branch circuit feeding the unit must be protected as shown on the unit's rating plate.

### Power Wiring

The power supply lines must be run in weather-tight conduit to the disconnect and into the side of the unit control box. Provide strain relief for all conduit with suitable connectors.


Provide flexible conduit supports whenever vibration transmission may cause a noise problem within the building structure.

1. Remove the Control/Heat access panel. Pass the power wires through the Power Entry hole in the end of the unit. See [Table 10, p. 23](#).
2. Connect the high voltage wires to the appropriate contactor terminals. Single phase units use a two (2) pole contactor and three phase units use three


- (3) pole contactor. Connect the ground to the ground lug on the chassis. See [Table 12, p. 23](#).

Ensure all connections are tight.


**Table 10. Power wiring**

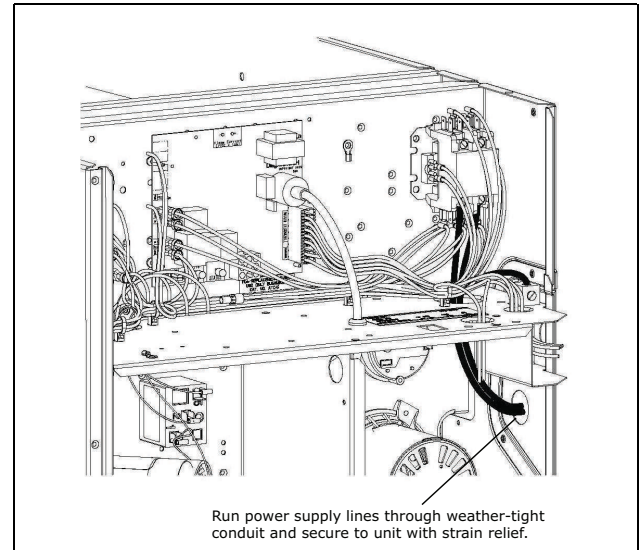


**Table 11. Power connections**

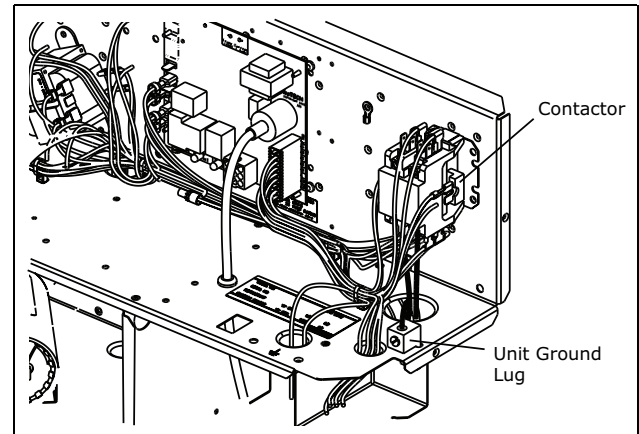

**Table 12. Mounted disconnect location**


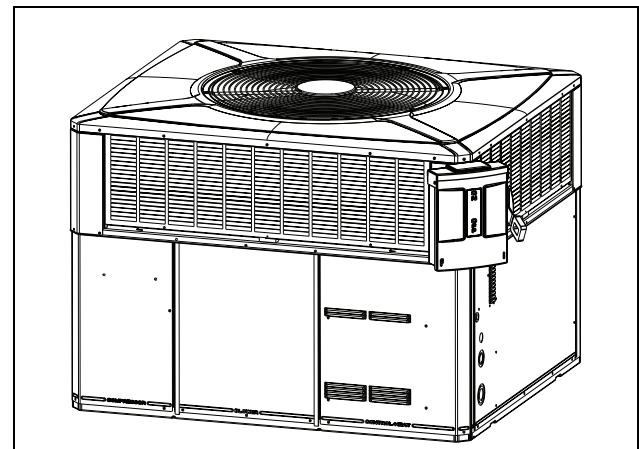


## Unit Installation

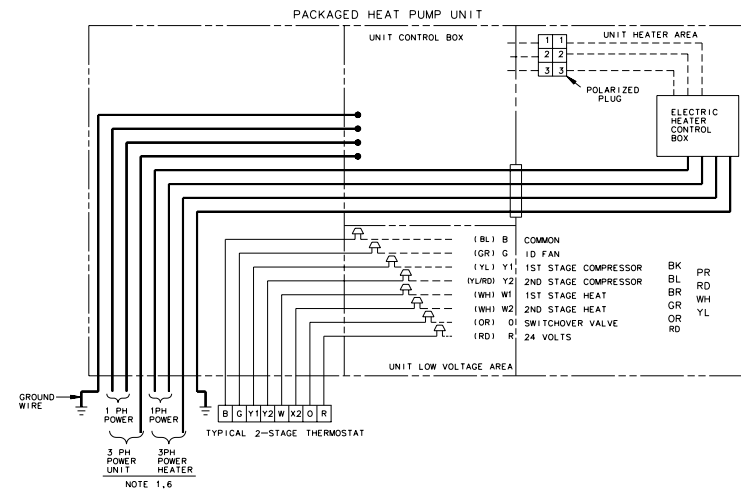

### NOTES:

1. FUSED DISCONNECT SIZE, POWER WIRING AND GROUNDING OF EQUIPMENT MUST COMPLY WITH CODES.
2. BE SURE POWER SUPPLY AGREES WITH EQUIPMENT AND HEATER NAMEPLATE.
3. LOW VOLTAGE WIRING TO BE 18 AWG MINIMUM CONDUCTOR.
4. SEE HEATER NAMEPLATE FOR CURRENT RATING OF HEATER USED.
5. SEE UNIT AND HEATER DIAGRAM FOR ELECTRICAL CONNECTION DETAILS.
6. IF ELECTRIC HEATER ACCESSORY IS NOT INSTALLED OMIT THE ELECTRIC HEATER, ASSOCIATED POWER WIRES AND THE X2 THERMOSTAT WIRES.
7. FIG. 2 DEMONSTRATES CONNECTION OF THE OUTDOOR THERMOSTAT ACCESSORY ONLY. FOR FURTHER UNIT CONNECTION DETAILS REFER TO THE OTHER FIGURES.
8. THE W1 (WH) WIRE IS FIRST STAGE ELECTRIC HEAT. IF THE ELECTRIC HEATER ACCESSORY HAS TWO HEATING STAGES THE W2 (WH) WIRE IS SECOND STAGE ELECTRIC HEAT.
9. THE BAYSTAT033A OUTDOOR THERMOSTAT ACCESSORY KIT CONTAINS A THERMOSTAT AND A RELAY. THE RELAY IS NOT REQUIRED TO BE USED IN THIS APPLICATION.

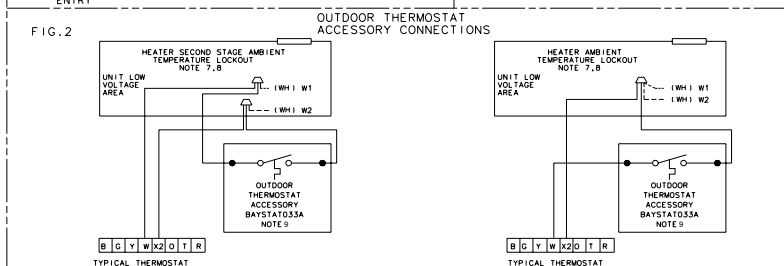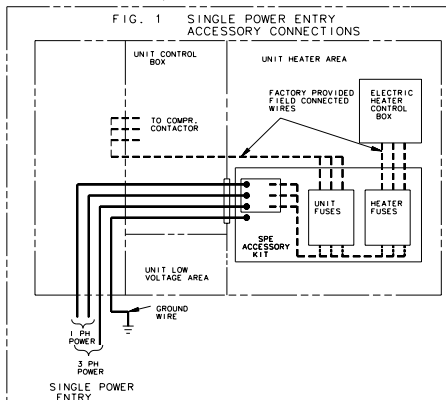

INTER-COMPONENT WIRING  
 - - - - - 24V LINE V WIRING  
 - - - - - 24V FIELD WIRING

WIRE COLOR	DESIGNATION
ABBR COLOR	ABBR COLOR
BK BLACK	PR PURPLE
BL BLUE	RD RED
BR BROWN	WH WHITE
GR GREEN	YL YELLOW
OR ORANGE	

### Control Wiring (Class II)

Low voltage control wiring should not be run in conduit with power wiring unless Class 1 wire of proper voltage rating is used. Route the thermostat cable or equivalent single leads of No. 18 AWG colored wire from the thermostat subbase terminals through the rubber grommet on the unit. See ["Determine Unit Clearances," p. 13](#) for the control entry (24V Entry) location. Make connections as shown on the wiring diagrams.

Do not short thermostat wires since this will damage the control transformer.

Refer to the table below for recommended wire sizes and lengths for installing the unit thermostat. The total resistance of these low voltage wires must not exceed one (1) ohm. Any resistance in excess of 1 ohm may

cause the control to malfunction because of the excessive voltage drop.

**Table 13. Thermostat wire size and maximum length**

Wire Size	Maximum Length (Ft)
18	75
16	125
14	200

**Important:** Upon completion of wiring, check all electrical connections, including factory wiring within the unit, and make sure all connections are tight. Replace and secure all electrical box covers and access panels before leaving the unit or turning on the power to the unit.



# Unit Start-Up

## Pre-Start Quick Checklist

- ☐ Is the unit properly located and level with the proper clearances? See, “[Determine Unit Clearances](#),” p. 13.
- ☐ Is the ductwork correctly sized, run, taped, insulated, and weatherproofed with proper unit arrangement as shown in the ductwork installation section?
- ☐ Is the condensate line properly sized, run, trapped, and pitched and shown in the Condensate Drain Piping section?
- ☐ Is the filter of the correct size and quantity? Is it clean and in place? See Air Filter Installation section.
- ☐ Is the wiring properly sized and run according to the unit wiring diagram?
- ☐ Are all the wiring connections, including those in the unit tight?
- ☐ Has the unit been properly grounded and fused with the recommended fuse size?
- ☐ Is the thermostat well located, level, and correctly wired? See Electrical Wiring section
- ☐ Have the air conditioning systems been checked at the service ports for charge and leak tested if necessary?
- ☐ Do the condenser fan and indoor blower turn free without rubbing and are they tight on the shafts?
- ☐ Has all work been done in accordance with applicable local and national codes?
- ☐ Are all covers and access panels in place to prevent air loss and safety hazards?

## Starting the Unit in Cooling Mode

**Note:** See the section on *Sequence of Operation* for a description of the cooling operating sequence.

To start the unit in the cooling mode, set the comfort control to **COOL** and to a setting below room temperature. The condenser fan motor, compressor and evaporator fan motor will operate automatically. Continuous fan mode during Cooling operation may not be appropriate in humid climates. If the indoor air exceeds 60% relative humidity or simply feels uncomfortably humid, it is recommended that the fan only be used in the **AUTO** mode.

## Operating Pressure Checks

After the unit has operated in the cooling mode for a short period of time, install pressure gauges on the gauge ports of the discharge and suction line valves (behind the Compressor access panel). Check the suction and discharge pressures and compare them to the normal operating pressures provided in the unit’s SERVICE FACTS.

**Note:** Do not use the *PRESSURE CURVES* from the unit’s SERVICE FACTS to determine the unit refrigerant charge. The correct charge is shown on the unit nameplate. To charge the system accurately, weigh in the charge according to the unit nameplate and check subcooling against the Subcooling Charging Table in the SERVICE FACTS.

## Voltage Check

With the compressor operating, check the line voltage at the unit (contactor is located behind the Control access panel). The voltage should be within the range shown on the unit nameplate. If low voltage is encountered, check the size and length of the supply line from the main disconnect to the unit. The line may be undersized for the length of the run.

## Cooling Shut Down

Set the comfort control to **OFF** or to a setting above room temperature.

**Important:** De-energize the main power disconnect *ONLY* when servicing the unit. Power may be required to keep the heat pump compressor warm and to boil off refrigerant in the compressor.

## Starting the Unit in Heating Mode

**Note:** See the section on *Sequence of Operation* for a description of the heat pump heating operating sequence.

Check that all grills and registers are open and all unit access panels are closed before start-up.

Set the comfort control above room temperature until achieving a first stage call for heat and set the fan to **AUTO** or **ON**.

## Heating Shut Down

Set the comfort control to **OFF** or at a setting below room temperature.

# Sequence of Operation

### General

Operation of the unit heating and cooling cycles is automatic when the system is set to **HEAT** or **COOL** (the optional automatic changeover thermostat, when set to **AUTO**, automatically changes to heat or cool with an appropriate room temperature change). The fan can be set to **ON**, causing continuous evaporator (indoor) fan operation or set to **AUTO** causing fan operation to coincide with heating or cooling run cycles. Continuous fan mode during cooling operation may not be appropriate in humid climates. If the indoor air exceeds 60% relative humidity or simply feels uncomfortably humid, it is recommended that the fan only be used in the **AUTO** mode. With the thermostat set to **ON** current is supplied to the control transformer (on 460V models the outdoor fan relay (ODF) is energized through normally closed contacts on the defrost control (DFC).

### Cooling Mode

#### Thermostat call for cooling (2-stage thermostat)

##### Call for 1st stage cooling only:

With the room thermostat set to **COOL** and the fan set to **AUTO**, power is supplied from the room thermostat "O" terminal to the unit switchover valve coil (SOV) and the "O" terminal on the ECMC board. This energizes the switch-over valve (SOV) placing it in the position for cooling (it is in the position for heating when deenergized). On a call for cooling, power is supplied to the unit from the room thermostat (Y1) and (G) terminal. (Y1) provides power to the compressor contactor (CC), the defrost control (DFC) and the electronically commutated motor control (ECMC). (G) provides power to the (ECMC) for low speed (IDM) indoor fan motor operation.

The energized compressor contactor (CC) completes the circuit to the compressor for 1st stage (Low) operation and the outdoor single speed fan motor (ODM). The (G) signal energizes the (ECMC) for the indoor fan motor (ECM) to operate on low speed. The thermostat will continue to cycle the compressor and fans to maintain the desired temperature.

##### Call for 2nd stage after 1st stage

On a call for 2nd stage cooling, power is supplied from the room thermostat (Y2) terminal to the A/C rectifier (ACR) and the (ECMC). This energizes the (ACR) switching the compressor to 2nd stage (High) operation. The (ECMC) is energized for indoor fan motor (ECM) high speed fan operation. The room thermostat will continue to cycle the system between 1st and 2nd stage to maintain the desired temperature.

### Heating Mode

#### Thermostat call for heat (2-stage thermostat)

##### Call for 1st stage heating only:

With the room thermostat set to **HEAT** and the fan set to **AUTO**, no power is supplied from the room thermostat "O" terminal to the unit switchover valve coil (SOV) and the "O" terminal on the ECMC board. This leaves the switch-over valve (SOV) in the normal position for heating and is the signal for the (ECMC) to run at indoor fan speeds designed for heating. On a call for heating, power is supplied to the unit from the room thermostat (Y1) and (G) terminal. (Y1) provides power to the compressor contactor (CC), the defrost control (DFC) and the electronically commutated motor control (ECMC). (G) provides power to the (ECMC) for low speed (ECM) indoor fan motor operation.

The energized compressor contactor (CC) completes the circuit to the compressor for 1st stage (Low) operation and the outdoor single speed fan motor (ODM). The indoor fan motor (ECM) will operate on low speed. The room thermostat will continue to cycle the compressor and fans to maintain the desired temperature.

##### Call for 2nd stage after 1st stage

On a call for 2nd stage heating, power is supplied from the room thermostat (Y2) terminal to the compressor rectifier (ACR) and the (ECMC). This energizes the (ACR) switching the compressor to 2nd stage (High) operation. The (ECMC) is energized for indoor fan motor (ECM) high speed fan operation. The room thermostat will continue to cycle the system between 1st and 2nd stage to maintain the desired temperature.

### Supplementary Heat

The supplementary electric heat is brought on when the indoor temperature drops 1-1/2 degrees below the thermostat setting. **TSH-2** contacts close providing power to the "**W**" terminal on the indoor thermostat and to the supplementary heater control circuit. An outdoor thermostat may have been added to disallow the second stage (if provided) of electric heat above a selected outdoor temperature. If the outdoor temperature falls below the setting on the outdoor thermostat, this additional heater stage will come on. When the outdoor air temperature rises, and the outdoor T-stat setpoint is reached, the system will revert back to first stage electric heating.

When the indoor ambient is satisfied, **TSH-2** contacts will open and the unit will revert back to the compressor only heating mode and then off. For **emergency heat** (use of supplementary electric heat only), an emergency (**EMERG**) heat switch is provided within the comfort control. When placed in the emergency heat position, it will disable the compressor, bypass the outdoor thermostats, if provided, and engage the supplementary electric heaters and indoor fan.

### Demand Defrost Operation

During the heating cycle, the outdoor coil may require a defrost cycle which is determined by the demand defrost control (DFC). This control continuously measures the outdoor coil temperature (CBS) and the outdoor ambient temperature (ODS-B) and calculates the difference or delta-T measurement. When the calculated delta-T is met, the demand defrost control (DFC) opens the circuit to the outdoor fan motor (ODM) and energizes the switch-over valve (SOV), placing the unit in the cooling mode to defrost the outdoor coil (on SCROLL bearing units only, the control will stop the compressor for a minimum of thirty (30) seconds). The outdoor coil temperature sensor (CBS) terminates the defrost cycle, or it times off after twelve (12) minutes in defrost, the (DFC) energizes the outdoor fan motor (ODM) and twelve seconds later de-energizes the (SOV), which returns the unit to the heating mode. Supplementary electric heat, if provided, is brought on to control indoor temperature during the defrost cycle. During this defrost cycle the indoor fan will run at the speed designated for 2nd stage cooling.

### Defrost Control

The demand defrost control measures heat pump outdoor ambient temperature with a sensor located outside the outdoor coil. A second sensor located on the outdoor coil is used to measure the coil temperature. The difference between the ambient and the colder coil temperature is the difference or delta-T measurement. This delta-T measurement is representative of the operating state and relative capacity of the heat pump system. Measuring the change in delta-T determines the need for defrost. The coil sensor also senses outdoor coil temperature for termination of the defrost cycle.


### ECM Fan Motor Adjustments

If the airflow needs to be increased or decreased, see the Airflow Table in the Service Facts. Information on changing the speed of the blower motor is in the Blower Performance Table.

Blower speed changes are made on the ICM Fan Control mounted in the control box. The ICM Fan Control controls the variable speed motor.

There is a bank of 8 dip switches located at the upper left side of the board. The dip switches work in pairs to match the cooling/heat airflow (CFM/TON), Fan off-delay options, and electric heat airflow adjustment. The switches appear as shown in [Figure 6, p. 27](#).

**Figure 6. ECM fan control**

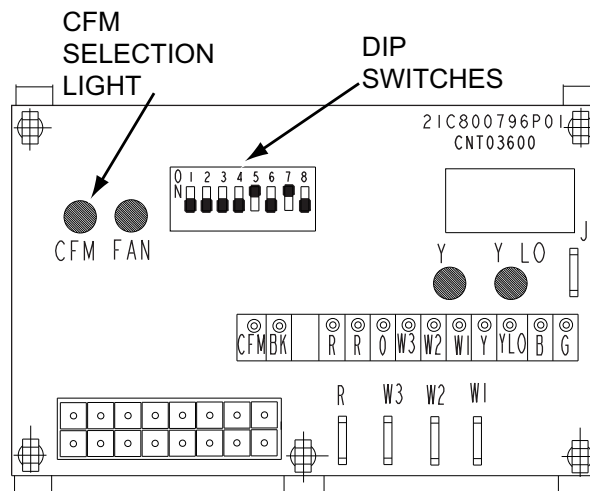


**Table 14. Cooling off - Delay options**

SWITCH SETTINGS		SELECTION	NOMINAL AIRFLOW
5 - OFF	6 - OFF	NONE	SAME
5 - ON	6 - OFF	45 SECONDS	100%*
5 - OFF	6 - ON	1.5 MINUTES	50%
5 - ON	6 - ON	**	50 - 100%

\* - This setting is equivalent to the BAY24X045 relay benefit.

\*\* - This ENHANCED MODE selection provides a ramping up and ramping down of the blower speed to provide improved comfort, quietness, and potential energy savings. The graph below shows the ramping process.

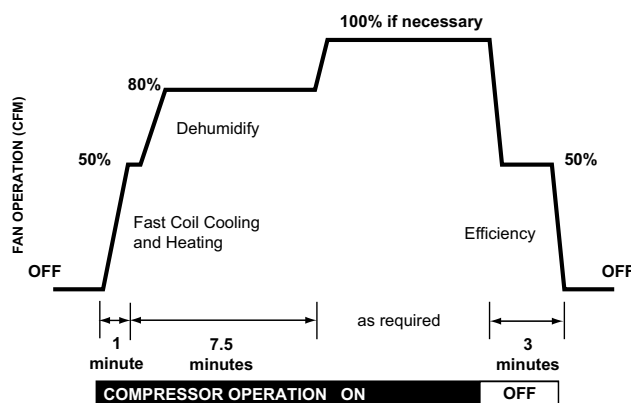

### Final Installation Checklist

**Important:** Perform a final unit inspection to be sure that factory tubing has not shifted during shipment. Adjust tubing if necessary so tubes do not rub against each other when the unit runs. Also be sure that wiring connections are tight and properly secured.


- ☐ Does the unit run and operate as described in the Sequence of Operation section in response to the room thermostat?
- ☐ Are the condenser fan and indoor blower operating correctly with proper rotation and without undue noise?
- ☐ Is the compressor operating correctly and has the system been checked with a charging chart?
- ☐ Has the voltage and running current been checked to determine if it is within limits?
- ☐ Has the thermostat been checked for calibration and the air discharge grills adjusted to balance the system?
- ☐ Has the ductwork been checked for air leaks and condensation?
- ☐ Has the furnace manifold pressure been checked and adjusted if necessary?
- ☐ Has the heating air temperature rise been checked?
- ☐ Has the unit been checked for tubing and sheet metal rattles? Are there any other unusual noises to be checked?
- ☐ Has all mitigation actions been verified?
- ☐ Are all covers and panels in place and properly fastened?
- ☐ Has the owner been instructed on the proper operation and maintenance of the unit? Be sure to leave this manual with the owner.

### Verification of Mitigation Actions

After installation, the installer must verify that the refrigerant leak detection system actuates all mitigating actions.


The test can be initiated by shorting the two test pins on the header of the mitigation control board inside of the unit. The mitigating actions will continue for approximately 5 minutes. See [Figure 7, p. 28](#).

**Figure 7. Mitigation control board**

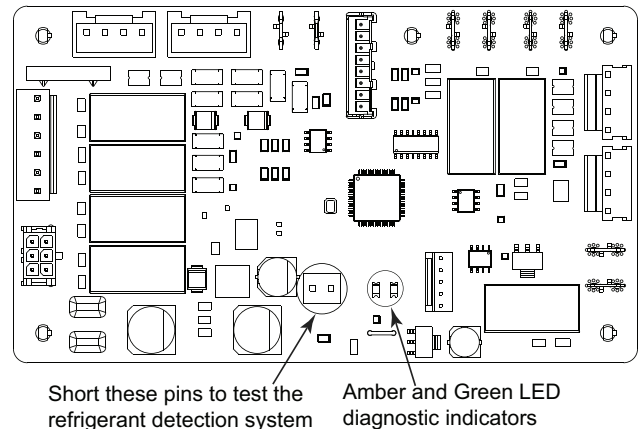

If any of the mitigating actions are not actuated by the system during the test, please check the following:

- All field wiring connections should be checked against the diagrams in the section of this manual.
- The diagnostic indicators on the mitigation control board should be checked against the diagnostic codes given in below.
- Scan the QR code below for more information on field troubleshooting of the refrigerant leak detection system.

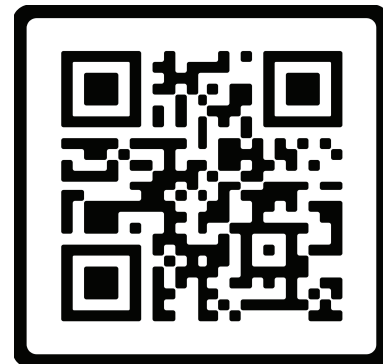

**Table 15. MCB diagnostic code table**

Condition	Green LED	Amber LED
Idle or Off	Off	Off
Start-up	On	On
No Active Alarm	Slow Flash	On
Active Alarm (Refrigerant Leak, Sensor Communicating Error, or Sensor Error)	3 Flash	On
Past Refrigerant Detected Alarm	4 Flash	On
Past Sensor Communication Error	5 Flash	On
Past Sensor Error	6 Flash	On

## Maintenance

### Owner Maintenance

Some of the periodic maintenance functions of the unit can be performed by the owner; this includes replacing the disposable or cleaning the permanent air filters, cleaning the unit cabinet, cleaning the condenser coil, and conducting a general unit inspection on a regular basis.

#### Filters

When the system is in constant operation, inspect the filters at least once each month.

If the unit has disposable-type filters, replace them with new filters of the same type and size. **Do not attempt to clean disposable filters.**

Permanent-type filters can be cleaned by washing them with a mild detergent and water. Make sure that the filters are thoroughly dry before reinstalling them in the unit (or duct system).

**Note:** *It may be necessary to replace permanent filters annually if washing fails to clean the filter or if the filter shows signs of deterioration. Be sure to use the same type and size as was originally installed.*

#### Condenser Coil

Be sure to keep all vegetation and debris away from the condenser coil area.

### Service Maintenance

#### Cooling Season

To keep the unit operating safely and efficiently, the manufacturer recommends that a qualified service technician check the entire system at least once each year or sooner if needed. The service technician should examine these areas of the unit:

- filters (for cleaning or replacement)
- motors and drive system components
- economizer gaskets (for possible replacement)
- safety controls (for mechanical cleaning)
- electrical components and wiring (for possible replacement and connection tightness)
- condensate drain (for proper sealing and cleaning)
- unit duct connections (to see that they are physically sound and sealed to the unit casing)
- unit mounting support (for structural integrity)
- the unit (for obvious unit deterioration)

#### Heating Season

Complete the following unit inspections and service routines at the beginning of each heating season.

- Visually inspect the unit to ensure that the airflow required for combustion and condenser coil is not obstructed from the unit.

- Inspect the control panel wiring to verify that all electrical connections are tight and that the wire insulation is intact.

#### Indoor Airflow Motor Speed Tap Setting

The units are factory set to Medium Low Speed.

If an electric Heater is installed refer to the electric heater nameplate for minimum airflow settings.

### Fault Detection

A fault condition is indicated by the flashing light on the defrost control board located inside the heat pump control box.

In normal operation, the defrost control light will flash once each second. If the light is flashing more than once per second or not at all, refer to the Demand Defrost Control Checkout table.

#### PIN Identification

1. TEST\_COMMON (Shorting any of the other pins to this pin causes the function of the other pin to be executed. Leaving this pin open results in the normal mode of operation.)
2. TST = Test (Shorting TEST\_COMMON to this pin speeds up all defrost board timings.)
3. FRC\_DFT = Forced Defrost (Short TEST\_COMMON to this pin for two (2) seconds to initiate a forced defrost. Remove the short after defrost initiates.)


#### Defrost Control Checkout

Normal operation requires:

- LED on board flashing 1 time/second.
- 24V AC between R & B
- 24V AC between Y & B with unit operating
- Defrost initiation when FRC\_DFT pin is shorted to TEST\_COMMON pin.

If a defrost control problem is suspected, proceed to the Demand Defrost Control Checkout table.

## Unit Start-Up

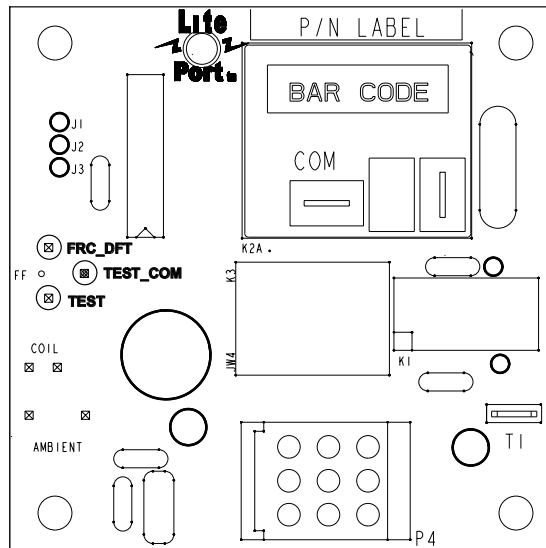

### Test Sensors

Using the chart below, locate (as close as possible) the actual sensor temperature. The measured resistance should be relatively close to the resistance value shown in the chart.

Example:

Sensor temp. = 19°F.

Measured Resistance = 46K ohms

This sensor is good since the measured value is relatively close to the chart value.

1 — Flash/Second	= Normal operation.
2 — Flashes/Second	= Fault A (Low ΔT): Inoperative compressor, loss of charge, open ambient sensor, shorted coil sensor.
3 — Flashes/Second	= Fault B (20 defrosts terminated on time) Fault C (High ΔT): SOV stuck in heating, shorted ambient sensor, open coil sensor, closed TXV, OD motor failure, OD fan on in defrost, undercharged unit.
4 — Flashes/Second	= Fault A & C or A & B

For additional information consult Pub. No. 34-1001 Heat Pump Defrost Controls.

TEMP (°F)	RESISTANCE
86	7.85K
81	8.85K
75	10.24K
70	11.59K
65	13.14K
59	15.32K
55	16.93K
50	19.41K
45	22.20K
41	24.76K
36	28.45K
32	31.84K
25	37.50K
19	46.44K
14	53.94K
10	57.64K
5	67.06K
0	78.05K

**Table 16. Demand defrost control checkout table**


SYMPTOMS	CHECKS	YES/NO	ACTIONS
1. LED off.	1. 24V R-B & Y-B at board, with unit running?	N	Repair low voltage wiring.
		Y	Complete Check #2.
	2. Short FRC_DFT pin to TEST_COMMON pin. Is defrost cycle initiated?	N	Replace defrost control.
		Y	LED is bad but control will still function.
2. LED flashing very rapidly (greater than 4 times/ sec) or appears to be on continuously.	TEST_COMMON pin shorted to TST pin?	Y	Remove short.
		N	Replace defrost control.
3. Control does not initiate a normal defrost.	1. OD Temp. below 49°F.? OD Coil temp. below 35°F.? "Delta" T increasing	N	Check refrigerant circuits for balanced distribution of refrigerant if OD coil is frosting and delta T is not increasing.
	2. LED flashing?	N	Refer to SYMPTOM #1.
		Y	Complete Check #2.
	3. Check for 24V Y-B at board with unit running.	N	Repair low voltage wiring.
		Y	Complete Check #3.
	4. Check sensors for correct mounting (connection) and resistance.		Remount or replace sensor if necessary.
	5. Short FRC_DFT pin to TEST_COMMON pin. Is defrost cycle initiated?	N	Replace defrost control.
		Y	Y-B signal or control may be intermittent.

Table 16. Demand defrost control checkout table (continued)

SYMPTOMS	CHECKS	YES/NO	ACTIONS
4. Control does not initiate a forced defrost.	24V R-B & Y-B at board with unit running?	N	Repair low voltage wiring.
		Y	Replace defrost control.
5. Defrost initiates manually but terminates in less than 10 seconds.			Replace defrost control.
6. Defrost initiates manually but terminates on time.	1. Coil sensor circuit open or reading at a very high resistance?	Y	Replace coil sensor.
	2. Does OD fan cycle off in defrost?	N	Replace defrost control.
	3. Windy weather preventing normal termination?		
7. Defrost initiates on approximately 15/25 minute intervals.	1. Be sure OD coil is clean.	N	Complete Check #2.
	2. Coil sensor open or reading a very high resistance?	Y	Replace coil sensor.
	3. Ambient sensor reading less than normal?	N	Complete Check #3.
		Y	Replace ambient sensor.
	4. OD fan off in defrost?	N	Replace defrost control.
8. Defrost initiates on approximately 30/45 minute intervals.	1. TEST_COMMON pin shorted to TST pin?	Y	Remove short.
	2. Do both sensors check OK?	N	Replace defective sensor (Clear coil and re agency heat light).
		Y	Complete SYMPTOM #3.
	3. Verify correct system charge.		Adjust as needed.
	4. Verify a "forced defrost" terminates less than 15 minutes.	N	Replace defrost control.
	5. OD fan motor off in defrost.		See SYMPTOM #9.
	6. Verify proper SOV operation.		Replace if necessary.
9. OD fan runs during defrost.			Replace defrost control.
10. No SOV delay on defrost termination.	Has J1 been cut?	Y	The soft-switch time is defeated when J1 is cut.
		N	Replace defrost control.
11. ODS-A burned out.	B to T greater than 10 volts?	Y	Check low voltage wiring for miswire.
		N	Check for short in low voltage wiring.
12. On SCROLL bearing units, compressor does not operate.	1. 24V R-B at board & 24V Y-B at board?	N	Repair low voltage wiring.
	2. Check protective devices in YO circuit. 24V YO-B present after 30 seconds.	N	Y-B signal or control may be intermittent
13. On SCROLL bearing units, no 30 second off delay at defrost initiation.	Check voltage between control terminals 2 and 7, force a defrost cycle. Is 24V present for 30 seconds and 0V thereafter?	N	Replace defrost control.

# Pressure Curves

Figure 8. Pressure curves for 5WCZ5024

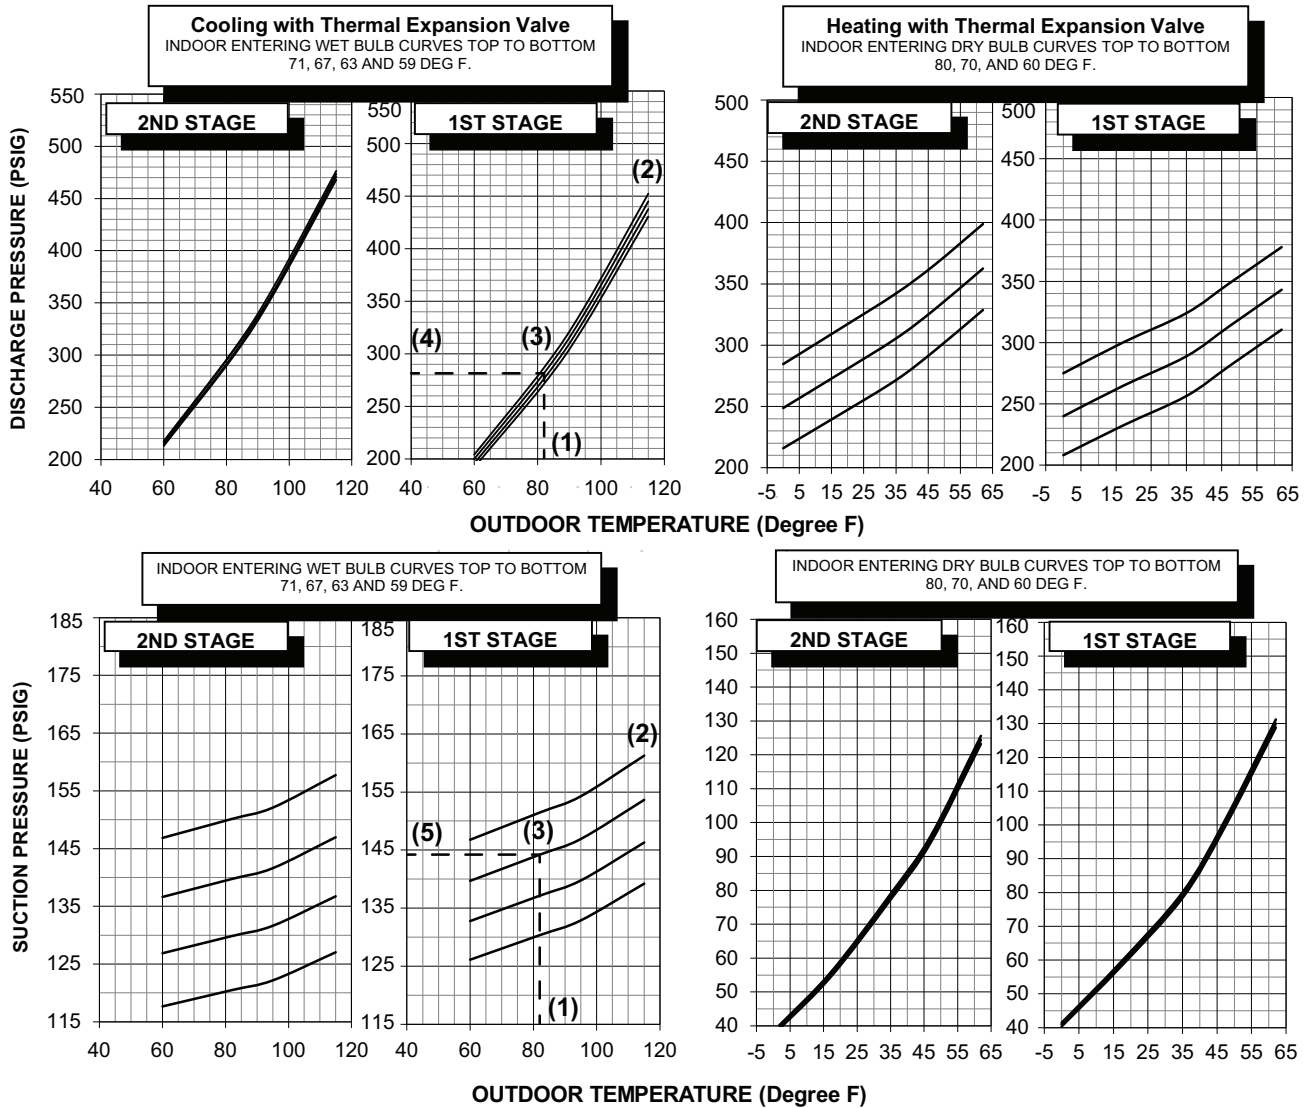

COOLING PERFORMANCE CAN BE CHECKED WHEN THE OUTDOOR TEMP IS ABOVE 65 DEG F.

TO CHECK COOLING PERFORMANCE, SELECT THE PROPER INDOOR CFM, ALLOW PRESSURES TO STABILIZE. MEASURE INDOOR WET BULB TEMPERATURE, OUTDOOR TEMPERATURE, DISCHARGE AND SUCTION PRESSURES. ON THE PLOTS LOCATE OUTDOOR TEMPERATURE (1); LOCATE INDOOR WET BULB (2); FIND INTERSECTION OF OD TEMP. & ID W.B. (3); READ DISCHARGE OR SUCTION PRESSURE IN LEFT COLUMN (4).


EXAMPLE: (1) OUTDOOR TEMP. 82 F.  
(2) INDOOR WET BULB 67 F.  
(3) AT INTERSECTION  
(4) DISCHARGE PRESSURE @ 650 CFM CFM IS 281 PSIG.  
(5) SUCTION PRESSURE @ 650 CFM CFM IS 144 PSIG.

ACTUAL:  
DISCHARGE PRESSURE SHOULD BE +/- 10 PSI OF CHART  
SUCTION PRESSURE SHOULD BE +/- 3 PSIG OF CHART

DWG.NO. 5WCZ5024



**Figure 9. Pressure curves for 5WCZ5030**

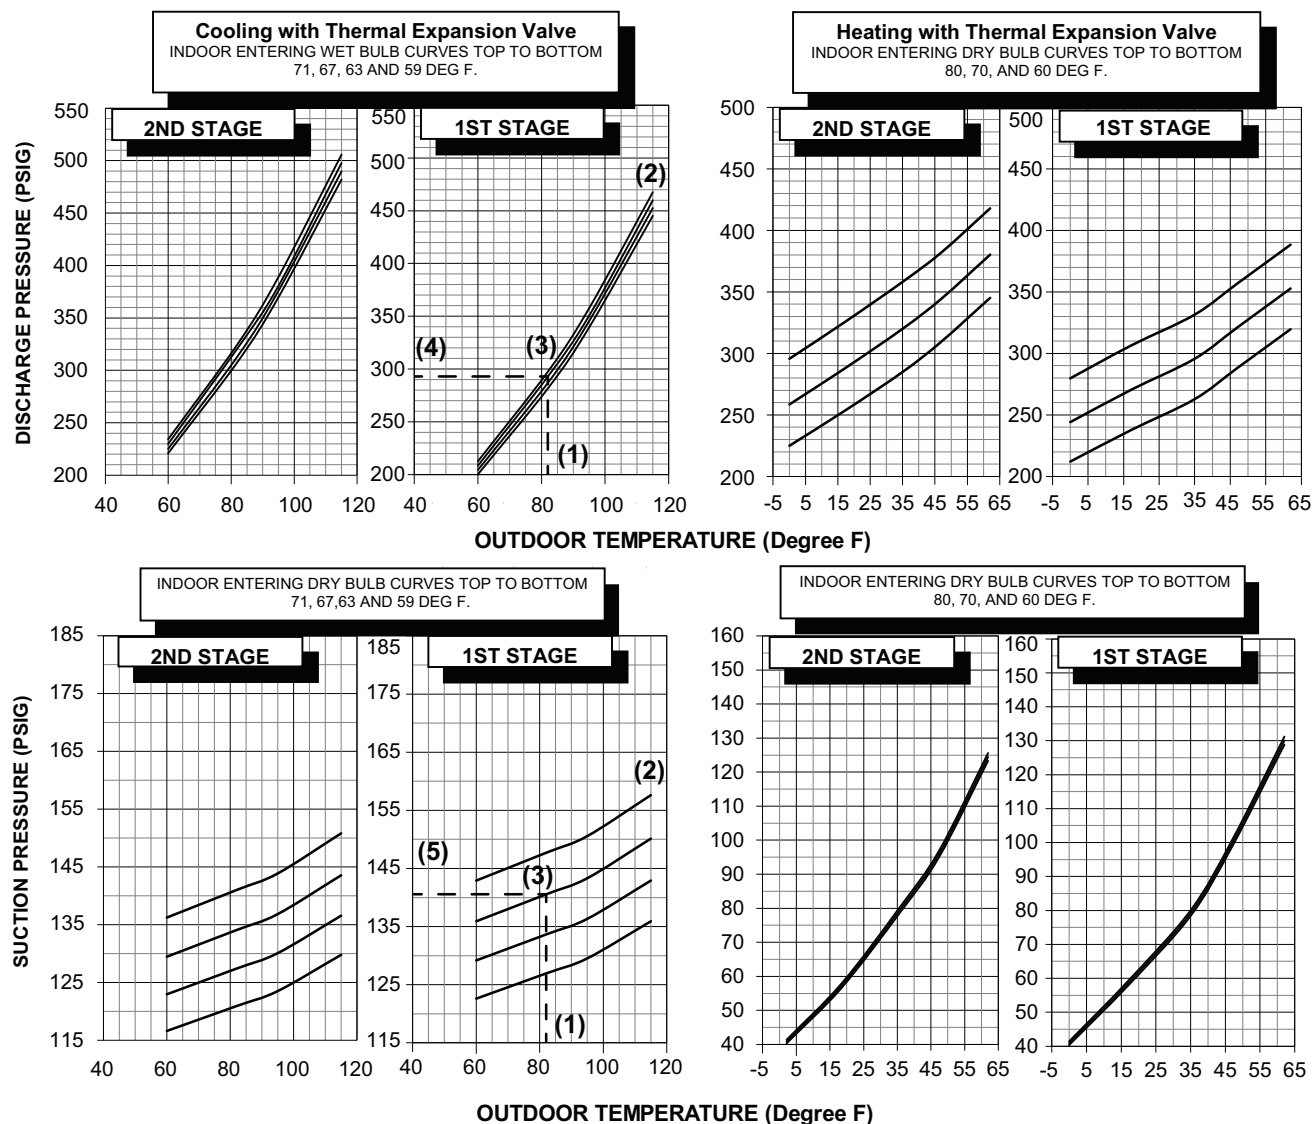

COOLING PERFORMANCE CAN BE CHECKED WHEN THE OUTDOOR TEMP IS ABOVE 65 DEG F.

TO CHECK COOLING PERFORMANCE, SELECT THE PROPER INDOOR CFM, ALLOW PRESSURES TO STABILIZE. MEASURE INDOOR WET BULB TEMPERATURE, OUTDOOR TEMPERATURE, DISCHARGE AND SUCTION PRESSURES. ON THE PLOTS LOCATE OUTDOOR TEMPERATURE (1); LOCATE INDOOR WET BULB (2); FIND INTERSECTION OF OD TEMP. & ID W.B. (3); READ DISCHARGE OR SUCTION PRESSURE IN LEFT COLUMN (4).


EXAMPLE: (1) OUTDOOR TEMP. 82 F.  
 (2) INDOOR WET BULB 67 F.  
 (3) AT INTERSECTION  
 (4) DISCHARGE PRESSURE @ 700 CFM CFM IS 293 PSIG.  
 (5) SUCTION PRESSURE @ 700 CFM CFM IS 141 PSIG.

ACTUAL:  
 DISCHARGE PRESSURE SHOULD BE +/- 10 PSI OF CHART  
 SUCTION PRESSURE SHOULD BE +/- 3 PSIG OF CHART

DWG.NO. 5WCZ5030

## Pressure Curves

Figure 10. Pressure curves for 5WCZ5036

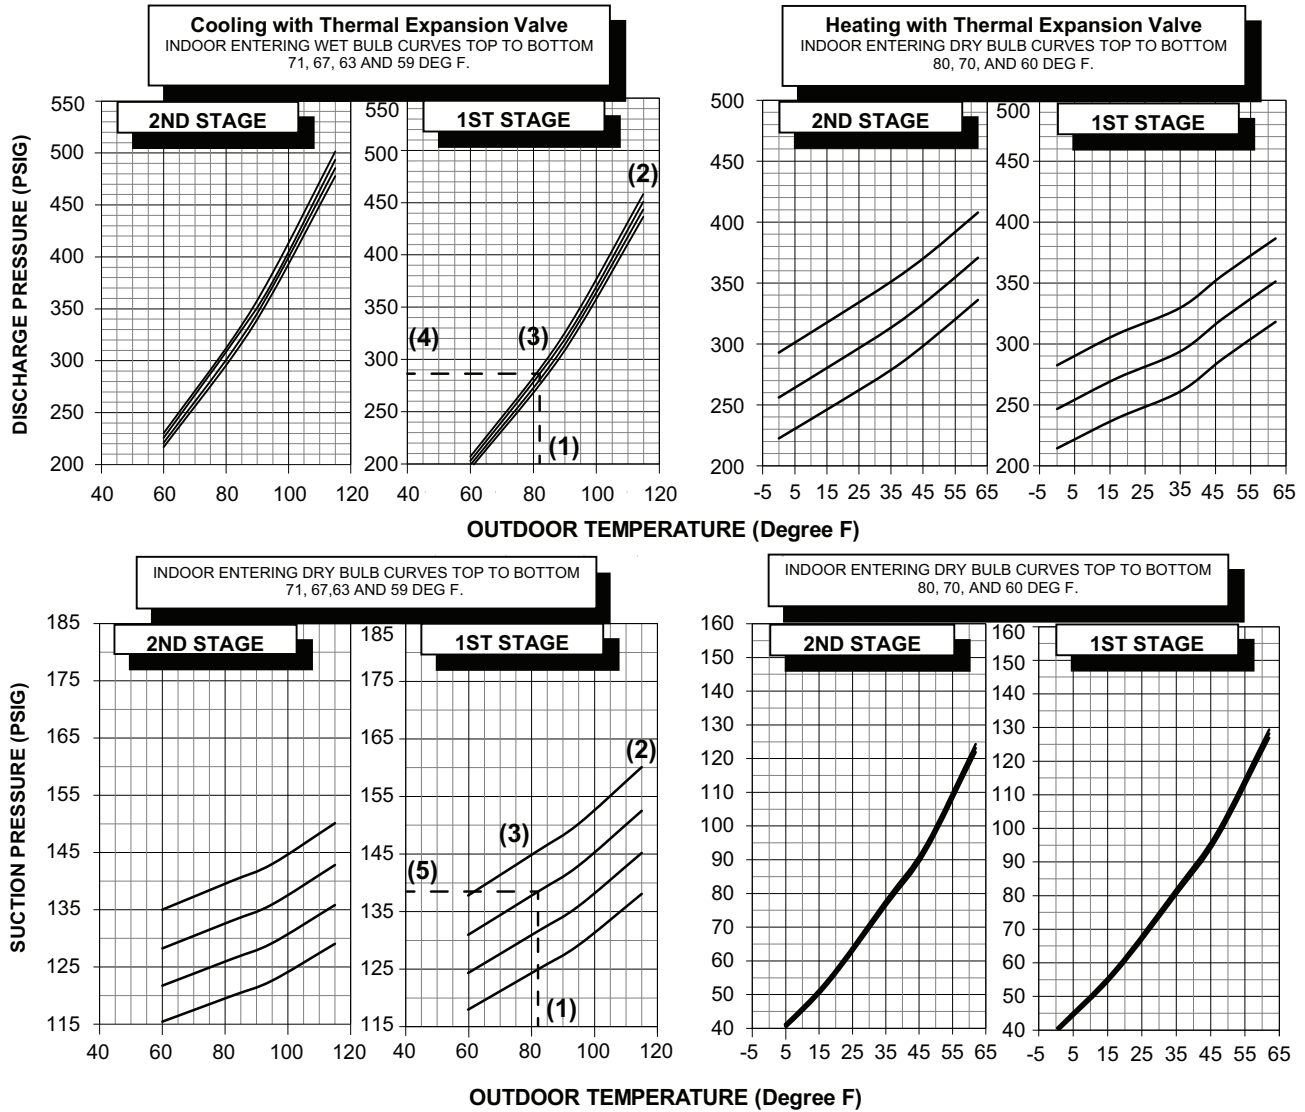

COOLING PERFORMANCE CAN BE CHECKED WHEN THE OUTDOOR TEMP IS ABOVE 65 DEG F.


TO CHECK COOLING PERFORMANCE, SELECT THE PROPER INDOOR CFM, ALLOW PRESSURES TO STABILIZE. MEASURE INDOOR WET BULB TEMPERATURE, OUTDOOR TEMPERATURE, DISCHARGE AND SUCTION PRESSURES. ON THE PLOTS LOCATE OUTDOOR TEMPERATURE (1); LOCATE INDOOR WET BULB (2); FIND INTERSECTION OF OD TEMP. & ID W.B. (3); READ DISCHARGE OR SUCTION PRESSURE IN LEFT COLUMN (4).

EXAMPLE: (1) OUTDOOR TEMP. 82 F.  
 (2) INDOOR WET BULB 67 F.  
 (3) AT INTERSECTION  
 (4) DISCHARGE PRESSURE @ 800 CFM CFM IS 287 PSIG.  
 (5) SUCTION PRESSURE @ 800 CFM CFM IS 138 PSIG.

ACTUAL:  
 DISCHARGE PRESSURE SHOULD BE +/- 10 PSI OF CHART  
 SUCTION PRESSURE SHOULD BE +/- 3 PSIG OF CHART

DWG.NO. 5WCZ5036

Figure 11. Pressure curves for 5WCZ5042

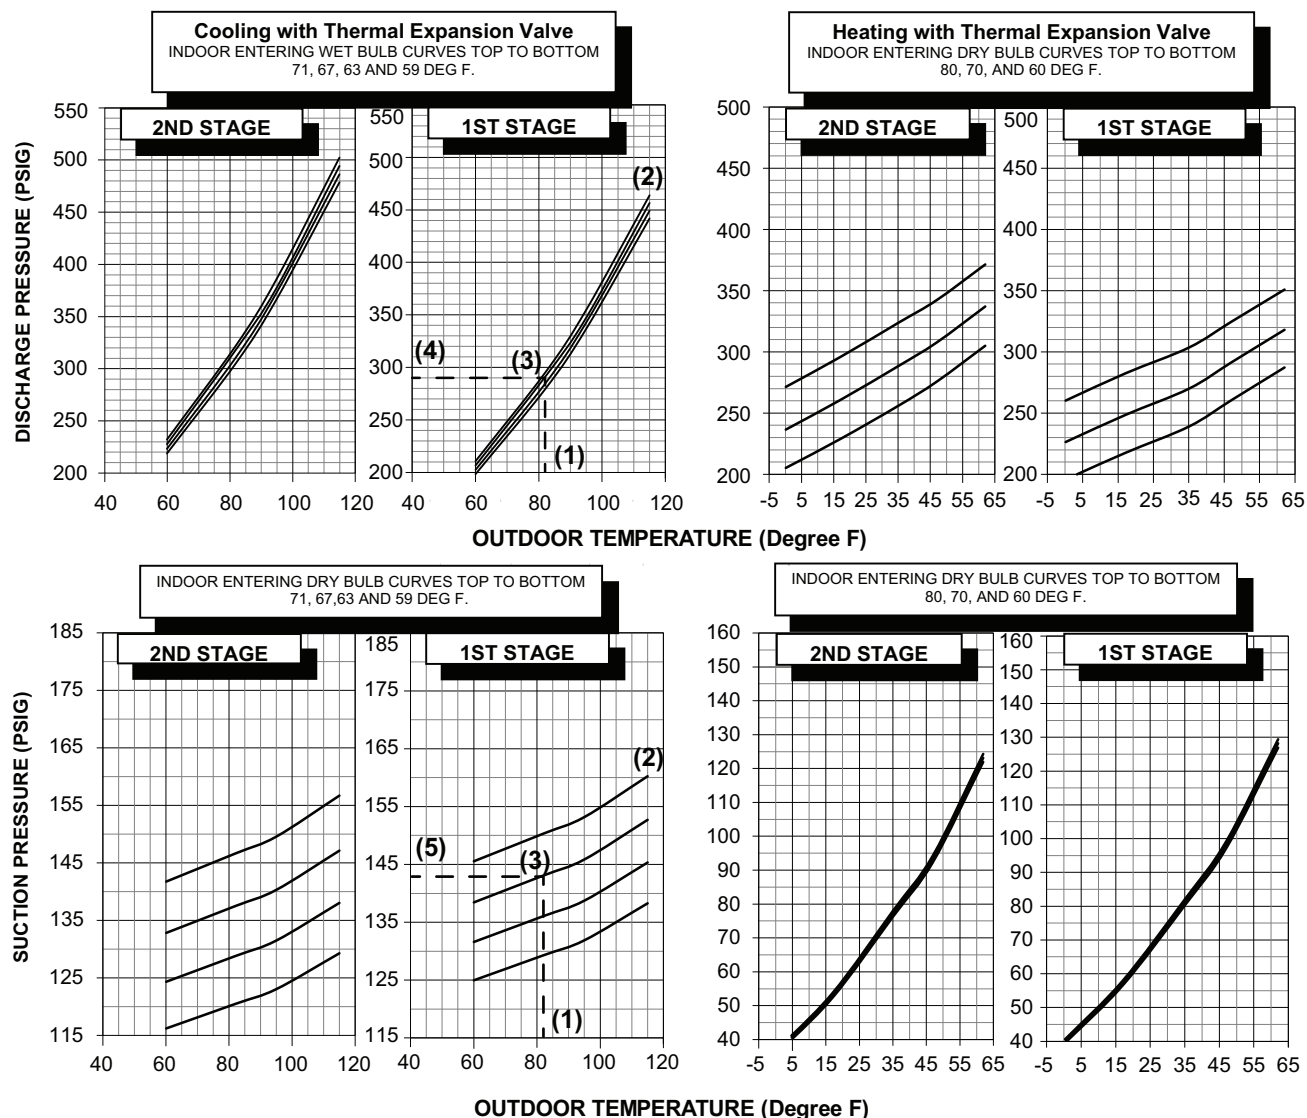

COOLING PERFORMANCE CAN BE CHECKED WHEN THE OUTDOOR TEMP IS ABOVE 65 DEG F.

TO CHECK COOLING PERFORMANCE, SELECT THE PROPER INDOOR CFM, ALLOW PRESSURES TO STABILIZE. MEASURE INDOOR WET BULB TEMPERATURE, OUTDOOR TEMPERATURE, DISCHARGE AND SUCTION PRESSURES. ON THE PLOTS LOCATE OUTDOOR TEMPERATURE (1); LOCATE INDOOR WET BULB (2); FIND INTERSECTION OF OD TEMP. & ID W.B. (3); READ DISCHARGE OR SUCTION PRESSURE IN LEFT COLUMN (4).


EXAMPLE: (1) OUTDOOR TEMP. 82 F.  
 (2) INDOOR WET BULB 67 F.  
 (3) AT INTERSECTION  
 (4) DISCHARGE PRESSURE @ 1100 CFM CFM IS 291 PSIG.  
 (5) SUCTION PRESSURE @ 1100 CFM CFM IS 143 PSIG.

ACTUAL:  
 DISCHARGE PRESSURE SHOULD BE +/- 10 PSI OF CHART  
 SUCTION PRESSURE SHOULD BE +/- 3 PSIG OF CHART

DWG.NO. 5WCZ5042

## Pressure Curves

Figure 12. Pressure curves for 5WCZ5048

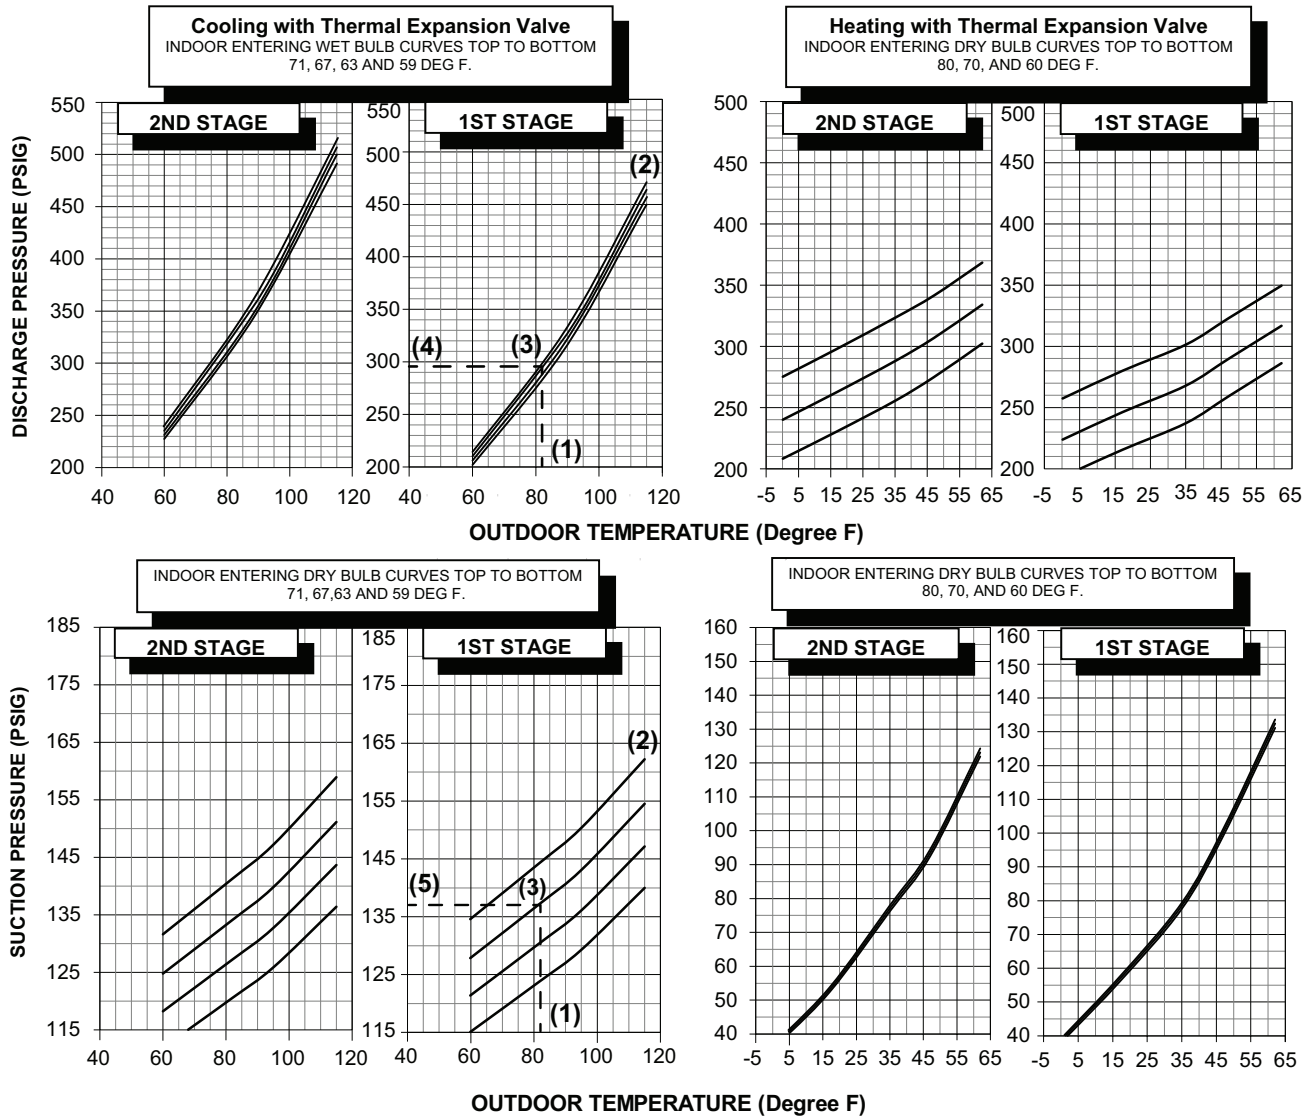

COOLING PERFORMANCE CAN BE CHECKED WHEN THE OUTDOOR TEMP IS ABOVE 65 DEG F.


TO CHECK COOLING PERFORMANCE, SELECT THE PROPER INDOOR CFM, ALLOW PRESSURES TO STABILIZE. MEASURE INDOOR WET BULB TEMPERATURE, OUTDOOR TEMPERATURE, DISCHARGE AND SUCTION PRESSURES. ON THE PLOTS LOCATE OUTDOOR TEMPERATURE (1); LOCATE INDOOR WET BULB (2); FIND INTERSECTION OF OD TEMP. & ID W.B. (3); READ DISCHARGE OR SUCTION PRESSURE IN LEFT COLUMN (4).

EXAMPLE: (1) OUTDOOR TEMP. 82 F.  
(2) INDOOR WET BULB 67 F.  
(3) AT INTERSECTION  
(4) DISCHARGE PRESSURE @ 1300 CFM CFM IS 296 PSIG.  
(5) SUCTION PRESSURE @ 1300 CFM CFM IS 137 PSIG.

ACTUAL:  
DISCHARGE PRESSURE SHOULD BE +/- 10 PSI OF CHART  
SUCTION PRESSURE SHOULD BE +/- 3 PSIG OF CHART

DWG.NO. 5WCZ5048

Figure 13. Pressure curves for 5WCZ5060

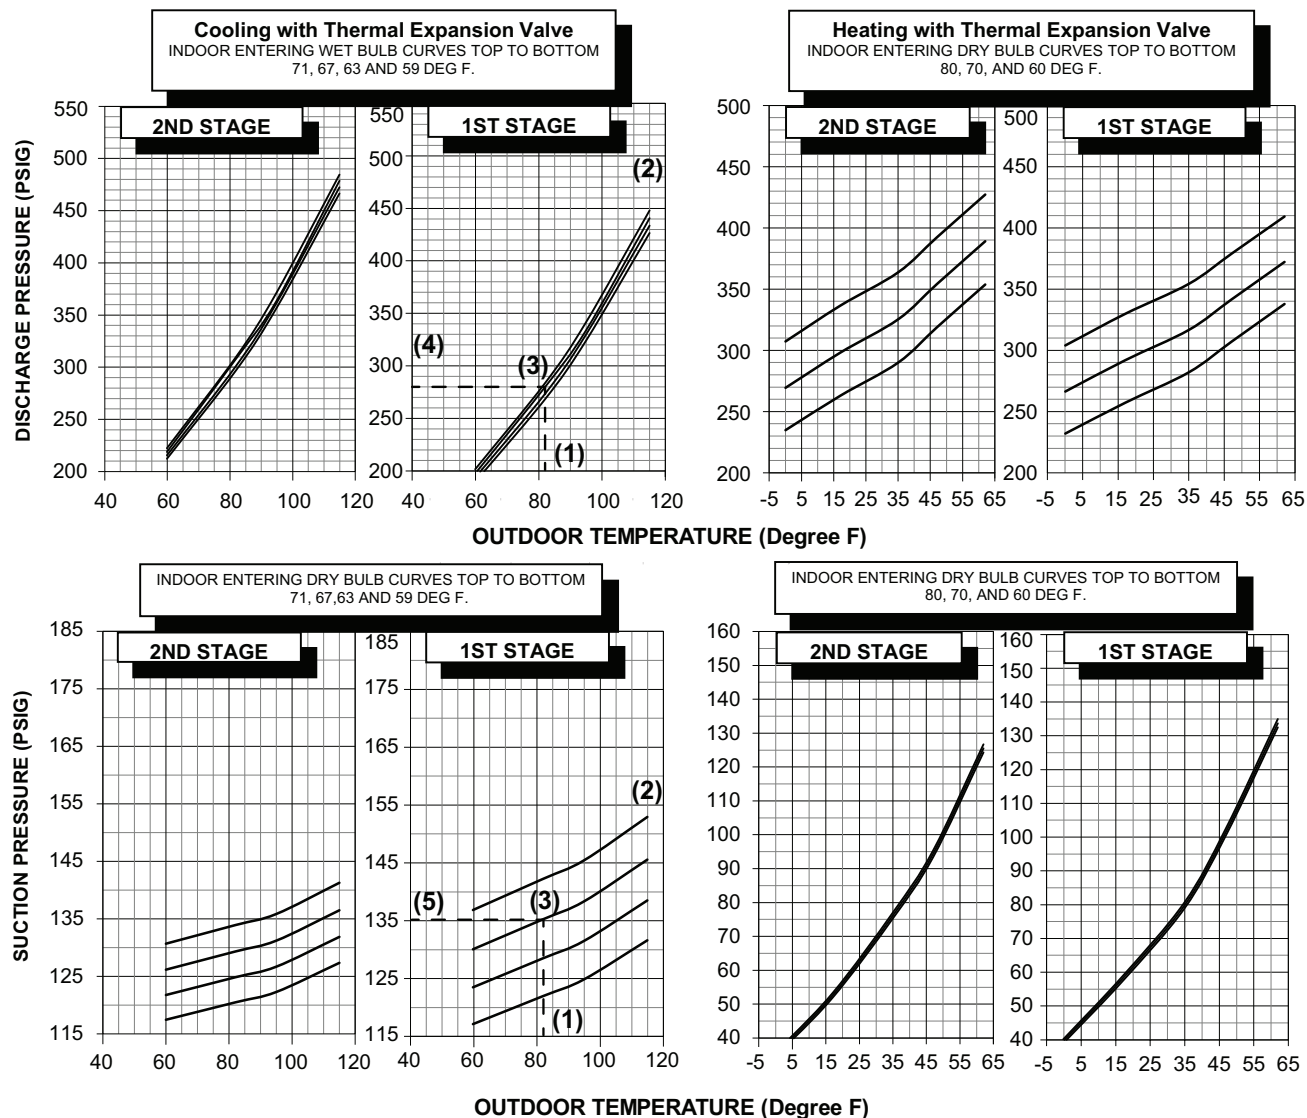

COOLING PERFORMANCE CAN BE CHECKED WHEN THE OUTDOOR TEMP IS ABOVE 65 DEG F.

TO CHECK COOLING PERFORMANCE, SELECT THE PROPER INDOOR CFM, ALLOW PRESSURES TO STABILIZE. MEASURE INDOOR WET BULB TEMPERATURE, OUTDOOR TEMPERATURE, DISCHARGE AND SUCTION PRESSURES. ON THE PLOTS LOCATE OUTDOOR TEMPERATURE (1); LOCATE INDOOR WET BULB (2); FIND INTERSECTION OF OD TEMP. & ID W.B. (3); READ DISCHARGE OR SUCTION PRESSURE IN LEFT COLUMN (4).

EXAMPLE: (1) OUTDOOR TEMP. 82 F.  
(2) INDOOR WET BULB 67 F.  
(3) AT INTERSECTION  
(4) DISCHARGE PRESSURE @ 1300 CFM CFM IS 280 PSIG.  
(5) SUCTION PRESSURE @ 1300 CFM CFM IS 135 PSIG.

ACTUAL:  
DISCHARGE PRESSURE SHOULD BE +/- 10 PSI OF CHART  
SUCTION PRESSURE SHOULD BE +/- 3 PSIG OF CHART

DWG.NO. 5WCZ5060

# Indoor Fan Performance

5WCZ5024A		EXTERNAL STATIC PRESSURE (IN.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	-	590 [601]	583 [588]	575 [571]	571 [562]	566 [563]	546 [549]	525 [525]	507 [517]	488 [504]	-
	High	-	721 [734]	724 [731]	727 [722]	717 [706]	706 [702]	701 [706]	695 [695]	678 [692]	660 [681]	-
400 CFM / Ton Setting <sup>(a)</sup>	Low	-	627 [638]	624 [622]	621 [619]	615 [617]	608 [613]	593 [600]	578 [588]	559 [575]	540 [554]	-
	High	-	801 [815]	806 [803]	811 [808]	806 [808]	800 [807]	789 [798]	777 [791]	745 [766]	712 [731]	-
450 CFM / Ton Setting	Low	-	672 [676]	673 [676]	673 [678]	664 [668]	654 [656]	648 [646]	641 [642]	620 [641]	599 [632]	-
	High	-	880 [885]	888 [892]	895 [902]	894 [900]	893 [896]	883 [881]	872 [874]	817 [844]	761 [803]	-

<sup>(a)</sup> Factory Default Setting.

5WCZ5030A		EXTERNAL STATIC PRESSURE (IN.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	-	703 [705]	713 [712]	715 [712]	705 [703]	689 [691]	673 [682]	658 [670]	646 [653]	627 [633]	606 [610]
	High	-	888 [892]	900 [901]	911 [912]	914 [913]	912 [909]	898 [897]	881 [887]	865 [874]	847 [857]	785 [783]
400 CFM / Ton Setting <sup>(a)</sup>	Low	-	762 [757]	771 [767]	776 [775]	775 [766]	756 [752]	739 [740]	723 [729]	711 [718]	701 [700]	682 [677]
	High	-	998 [990]	1013 [1008]	1020 [1013]	1025 [1016]	1023 [1015]	1021 [1011]	1015 [1000]	990 [986]	963 [966]	849 [833]
450 CFM / Ton Setting	Low	-	842 [835]	852 [848]	862 [856]	863 [857]	854 [847]	836 [834]	820 [822]	803 [810]	788 [795]	760 [743]
	High	-	1146 [1120]	1153 [1127]	1157 [1133]	1158 [1137]	1159 [1139]	1159 [1138]	1156 [1135]	1144 [1125]	1034 [1040]	922 [927]

<sup>(a)</sup> Factory Default Setting.

5WCZ5036A*		EXTERNAL STATIC PRESSURE (IN.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	-	812 [808]	821 [816]	829 [818]	826 [811]	818 [795]	804 [777]	791 [762]	778 [751]	770 [742]	751 [723]
	High	-	1056 [1055]	1069 [1068]	1074 [1073]	1076 [1073]	1077 [1074]	1076 [1063]	1070 [1063]	1060 [1052]	1029 [1020]	893 [905]
400 CFM / Ton Setting <sup>(a)</sup>	Low	-	894 [892]	903 [898]	913 [904]	915 [904]	913 [891]	905 [873]	887 [860]	874 [845]	859 [833]	793 [803]
	High	-	1196 [1199]	1199 [1205]	1203 [1208]	1205 [1210]	1208 [1211]	1209 [1209]	1208 [1207]	1202 [1198]	1114 [1099]	994 [984]
450 CFM / Ton Setting	Low	-	990 [988]	1002 [994]	1009 [1004]	1013 [1005]	1012 [1003]	1009 [997]	1000 [983]	989 [969]	974 [943]	866 [863]
	High	-	1369 [1381]	1370 [1381]	1372 [1383]	1374 [1381]	1375 [1382]	1375 [1369]	1370 [1373]	1300 [1298]	1199 [1194]	1091 [1085]

<sup>(a)</sup> Factory Default Setting.

5WCZ5042A		EXTERNAL STATIC PRESSURE (IN.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	-	990 [980]	982 [971]	970 [957]	957 [945]	944 [937]	935 [920]	916 [902]	892 [881]	868 [860]	845 [837]
	High	-	1246 [1251]	1245 [1245]	1240 [1240]	1237 [1238]	1233 [1227]	1222 [1217]	1215 [1207]	1206 [1194]	1196 [1182]	1185 [1168]
400 CFM / Ton Setting (a)	Low	-	1103 [1096]	1096 [1089]	1088 [1080]	1077 [1068]	1072 [1061]	1060 [1048]	1048 [1035]	1033 [1019]	1012 [1002]	991 [983]
	High	-	1407 [1103]	1408 [1096]	1403 [1088]	1403 [1077]	1398 [1072]	1390 [1060]	1379 [1048]	1368 [1033]	1359 [1012]	1349 [991]
450 CFM / Ton Setting	Low	-	1234 [1241]	1232 [1236]	1227 [1229]	1221 [1228]	1218 [1216]	1207 [1208]	1200 [1197]	1190 [1187]	1181 [1176]	1171 [1163]
	High	-	1571 [1587]	1575 [1589]	1584 [1586]	1580 [1579]	1575 [1573]	1568 [1561]	1563 [1551]	1556 [1539]	1547 [1529]	1540 [1516]

(a) Factory Default Setting.

5WCZ5048A*		EXTERNAL STATIC PRESSURE (IN.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	-	954 [948]	973 [977]	977 [977]	973 [970]	966 [969]	957 [975]	950 [979]	944 [962]	-	-
	High	-	1363 [1354]	1390 [1396]	1396 [1396]	1390 [1386]	1379 [1384]	1368 [1393]	1358 [1399]	1349 [1375]	-	-
400 CFM / Ton Setting(a)	Low	-	1121 [1102]	1106 [1106]	1104 [1109]	1106 [1113]	1108 [1116]	1108 [1119]	1104 [1120]	1097 [1118]	-	-
	High	-	1601 [1574]	1580 [1580]	1577 [1585]	1580 [1589]	1583 [1594]	1583 [1599]	1577 [1601]	1567 [1597]	-	-
450 CFM / Ton Setting	Low	-	1223 [1295]	1254 [1277]	1268 [1272]	1271 [1273]	1268 [1274]	1264 [1273]	1261 [1272]	1258 [1273]	-	-
	High	-	1747 [1851]	1792 [1824]	1811 [1817]	1816 [1818]	1812 [1820]	1806 [1819]	1801 [1817]	1797 [1819]	-	-


(a) Factory Default Setting.

5WCZ5060A*		EXTERNAL STATIC PRESSURE (IN.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	-	1163 [1259]	1238 [1219]	1259 [1208]	1256 [1207]	1246 [1206]	1240 [1199]	1237 [1188]	1230 [1185]	-	-
	High	-	1662 [1799]	1768 [1742]	1799 [1726]	1794 [1725]	1780 [1723]	1771 [1712]	1767 [1698]	1757 [1692]	-	-
400 CFM / Ton Setting(a)	Low	-	1443 [1410]	1427 [1393]	1422 [1386]	1422 [1384]	1423 [1383]	1422 [1380]	1418 [1368]	1410 [1344]	-	-
	High	-	2062 [2015]	2038 [1990]	2031 [1980]	2032 [1977]	2034 [1976]	2032 [1971]	2025 [1955]	2015 [1920]	-	-


(a) Factory Default Setting.

Airflow with Auxiliary Heat (CFM)								
SWITCH SETTINGS		SELECTION	NOMINAL AIRFLOW					
			5WCZ5024	5WCZ5030	5WCZ5036	5WCZ5042	5WCZ5048	5WCZ5060
7 - OFF	8 - OFF	LOW	700 CFM	875CFM	1050 CFM	1225 CFM	1400 CFM	1750 CFM
7 - ON	8 - OFF	HIGH	800 CFM	1000CFM	1200 CFM	1400 CFM	1600 CFM	2000 CFM
7 - OFF	8 - ON	HIGH	800 CFM	1000CFM	1200 CFM	1400 CFM	1600 CFM	2000 CFM
7 - ON	8 - ON	HIGH	800 CFM	1000CFM	1200 CFM	1400 CFM	1600 CFM	2000 CFM

# Refrigerant Circuit

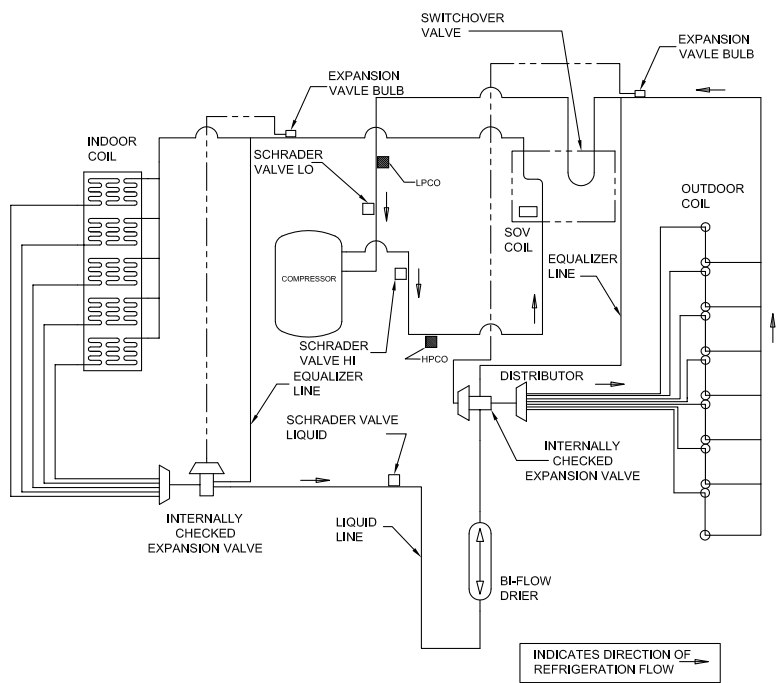

## Heating Refrigeration Cycle

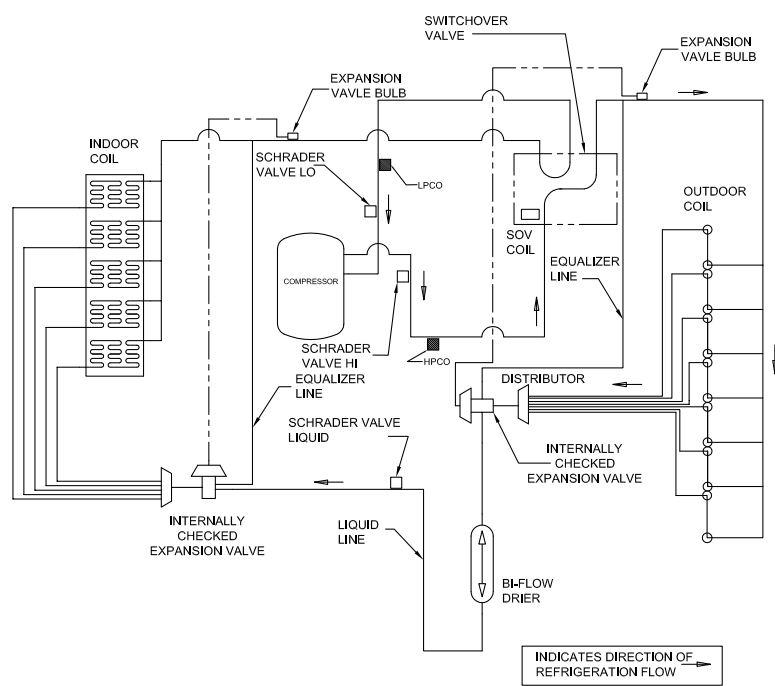

## Cooling Refrigeration Cycle



# Troubleshooting Chart

P-PRIMARY CAUSES / S-SECONDARY CAUSES

SYSTEM FAULTS	Power Supply	High Voltage Wiring	Compr. IOL	Run Capacitor	Start capacitor	Start Relay	Contactor Contacts	Low Voltage Wiring	Control Transformer	Contactor Coil	Low Voltage Fuse	Stuck Compressor	Ineffecient Compressor	Refrigerant Undercharge	Refrigerant Overcharge	Excessive Evap. Load	Noncondensables	Restricted O.D. Airflow	O.D. Air Recirculation	TXV Stuck Open	Low Superheat	High Superheat	Restricted I.D. Airflow	Ref. Circuit Restrictions	Mitigation System
	REFRIGERANT CIRCUIT																								
Liquid Pressure too High															P		S	P	S					S	
Liquid Pressure too Low													S	P						S		S		S	
Suction Pressure too High													S		P	P				S	S				
Suction Pressure too Low														S								S	P	S	
Liquid Refrigerant Floodback (TXV System)																				S	S		P		
I.D. Coil Frosting														P							S		P	S	
Compressor Runs Inadequate or No Cooling													S	P		P	S	S	S			S	P	S	
ELECTRICAL																									
Compressor & O.D. Fan Do Not Start	P	P					S	S	P	P	P														P(a)
Compressor will not Start but O.D. Fan Runs		P	S	P	P	P						S													
O.D. Fan will Not Start		P		P																					
Compressor Hums but will Not Start		P		P	P	P	S					S													
Compressor Cycles on IOL		P	S	P	P	P	S					P	S	P	S	S	S	S	S			S		S	
I.D. Blower willnot Start	P	S						S	P		P														

<sup>(a)</sup> See, [Verification of Mitigation Actions](#), p. 28





# Important Product Information

Packaged Unit Serial Number \_\_\_\_\_

Packaged Unit Model Number \_\_\_\_\_

Date of Installation \_\_\_\_\_

Dealer \_\_\_\_\_

## Service Information

Call your installing dealer if the unit is inoperative. Before you call, always check the following to be sure service is required:

1. Be sure the main switch that supplies power to the unit is in the ON position.
2. Replace any burned-out fuses or reset circuit breakers.
3. Be sure the thermostat is properly set.

Service Phone \_\_\_\_\_

## About Trane and American Standard Heating and Air Conditioning

Trane and American Standard create comfortable, energy efficient indoor environments for residential applications. For more information, please visit [www.trane.com](http://www.trane.com) or [www.americanstandardair.com](http://www.americanstandardair.com).



The AHRI Certified mark indicates company participation in the AHRI Certification program. For verification of individual certified products, go to [ahridirectory.org](http://ahridirectory.org).

The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.

PKGR-SVX002A-EN 21 Feb 2025

Supersedes 18-BB45D1-1A-EN (November 2024)

©2025